

Fisher-Price **Kasey**  
the  
**Kinderbot™**  
LEARNING SYSTEM



**Numbers &  
Counting**

**"Let's  
count  
together!"**

Discover what's possible™... [www.fisher-price.com](http://www.fisher-price.com)

# Getting Started

Please keep this manual for future reference, as it contains important information.

**Before inserting the software cartridge, turn power off by pressing the On/Off button on the top of Kasey's foot. Insert the software cartridge into the software port and Kasey automatically turns back on!**



# Explore the Math Arcade!

Choose an activity from the Main Menu: **Try the Gumball Machine**, **Count Tickets to Buy Prizes**, **Win Toys and Compare Sizes** or **Play Pinball Shapes and Patterns**. Press a colored selection button to make your choice.

**Note:** Each activity has a teach mode and a quiz mode. Sometimes, Kasey may skip teach mode and go right to quiz mode.

## Try the Gumball Machine

Press the red selection button. Count the gumballs in the bags and compare which bag has more and which has less.

## Count Tickets to Buy Prizes

Press the blue selection button. Count your tickets and then “buy” a prize!



## Win Toys and Compare Sizes

Press the yellow selection button. Find the toys that are long, short, big, little, wide or narrow.

## Play Pinball Shapes and Patterns

 
Press the green selection button. Discover how to make patterns.

## Home Button


Press the Home Button to return to the Main Menu at any time.



# Try the Gumball Machine

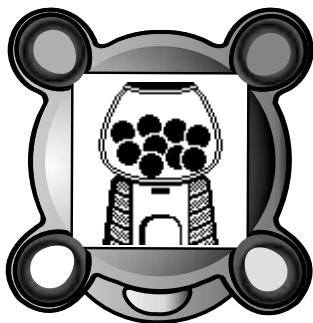

Yellow  
Selection  
Button

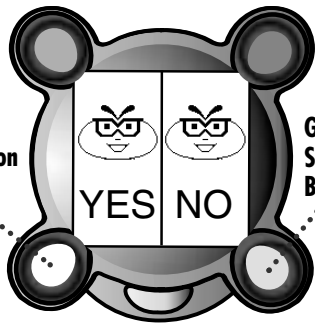 

Green  
Selection  
Button

- Sing along with Kasey to a fun counting song!  
**Hint:** Sometimes Kasey will go directly to filling a bag with gumballs.


- When the music is complete, you can play it again (press the yellow selection button for yes) or you can continue in this activity (press the green button for no).




- Count to 10 with Kasey!




# Try the Gumball Machine

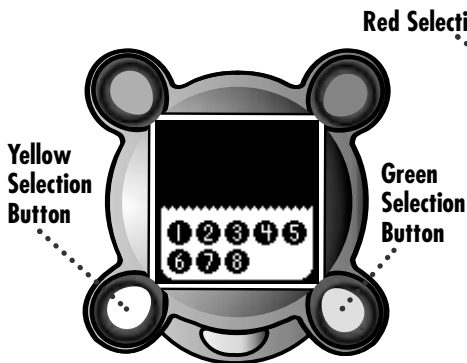 

 - Press the green (or yellow) selection button to fill the bottom bag with gumballs.

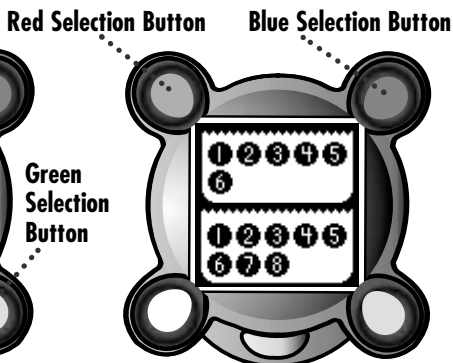


- Then, press the red (or blue) selection button to fill the bag on top with gumballs.

**Hint:** When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.




# Try the Gumball Machine

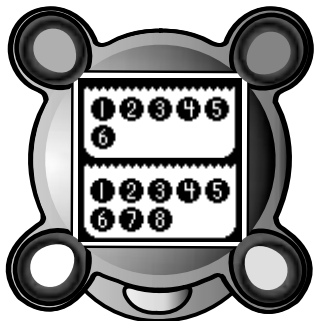 


- Kasey tells you which bag has more or less gumballs.

 *"You're a math genius!"*

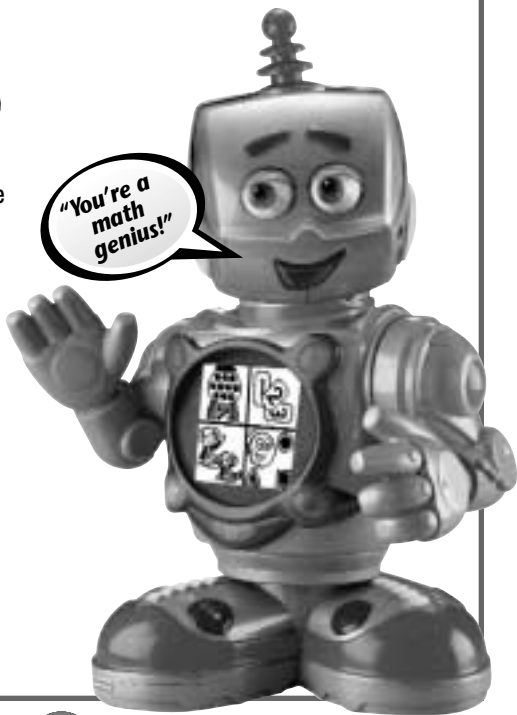




# Try the Gumball Machine

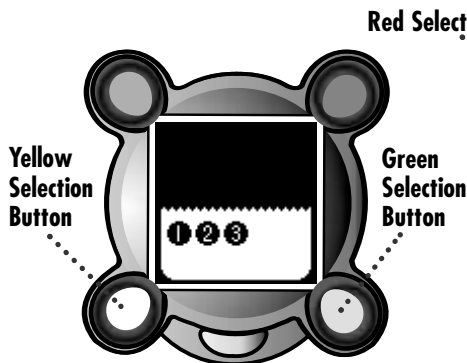 

 - Press the green (or yellow) selection button to fill the bottom bag with gumballs.

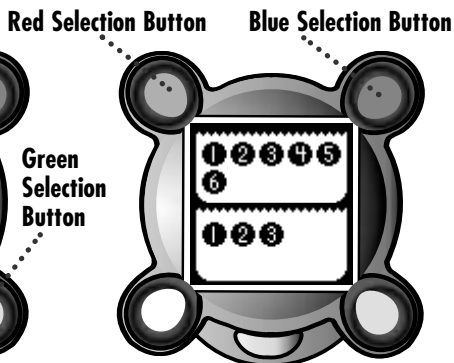

- Then, press the blue (or red) selection button to fill the bag on top with gumballs.




# Try the Gumball Machine

 
Red Selection Button

Blue Selection Button


Yellow Selection Button

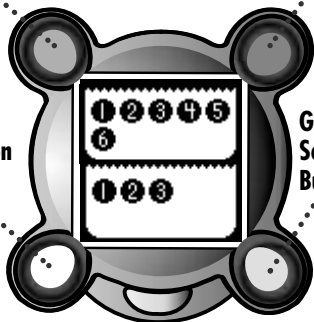

Green Selection Button

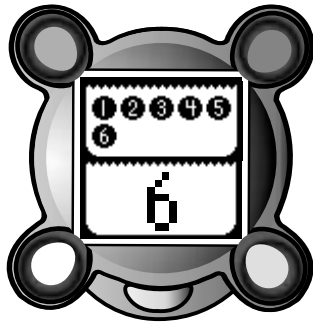 

 
- Pick which bag has more or less gumballs.
- Press the red or blue selection button to choose the top bag of gumballs; press the yellow or green selection button to choose the bottom bag of gumballs.
- If you choose correctly, great job!
- If you choose incorrectly, Kasey tells you which bag has more or less. Fill more bags with gumballs and try again!

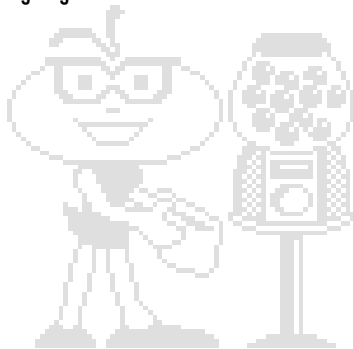






# Count Tickets to Buy Prizes

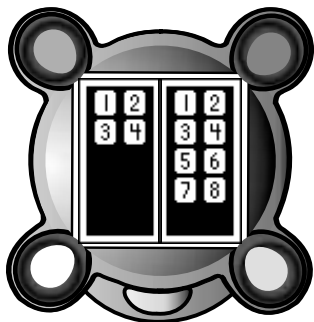 

 
- Count the tickets on both sides of the screen with Kasey!

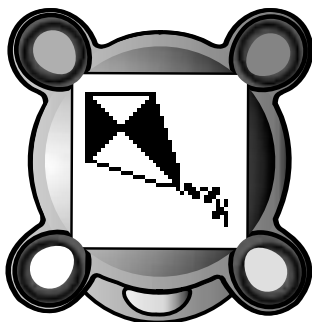

- Kasey picks a side to buy a prize!





**Hint:** When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



# Count Tickets to Buy Prizes

  
Left Selection Buttons    Right Selection Buttons

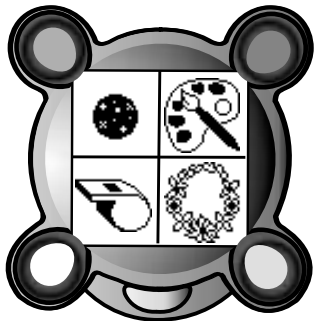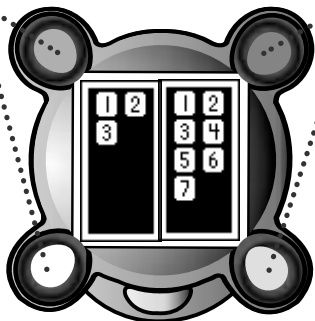

- Listen to Kasey's question. Press the left or right selection buttons to answer the question.
- If you choose incorrectly, Kasey shows you the correct answer. Try again and answer another question.
- If you choose correctly, pick a prize!





## Count Tickets to Buy Prizes

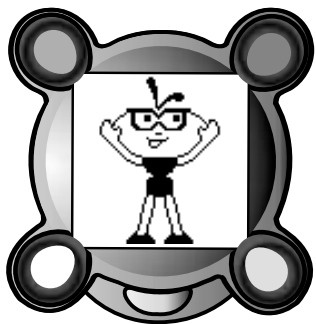 

- Now, it's time for a stretch break.

  
"I think I need to stretch!"

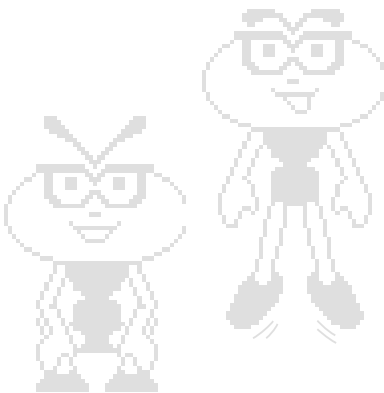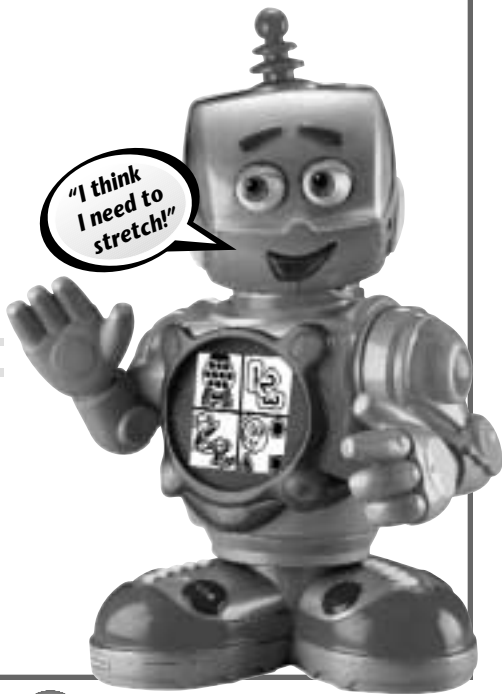




# Win Toys and Compare Sizes

 
Let's learn about different sizes. Listen and watch as Kasey shows you different toys: big and little; wide and narrow; and long and short.

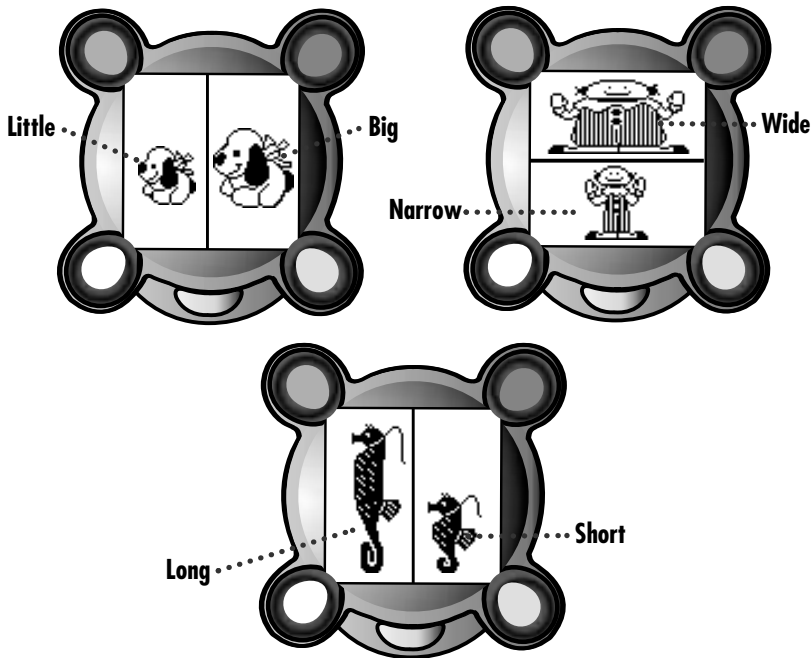


**Hint:** When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



## Win Toys and Compare Sizes

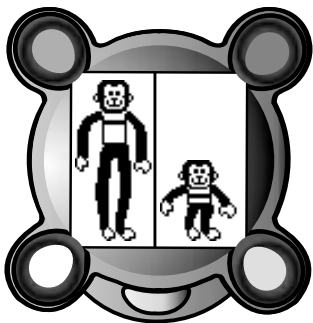 

 
- Now it's your turn. Listen to Kasey tell you which colored selection button to press to win your toy.
- Kasey asks to pick which toy is "long or short", "wide or narrow" or "big or small". Press the colored selection button next to your answer.

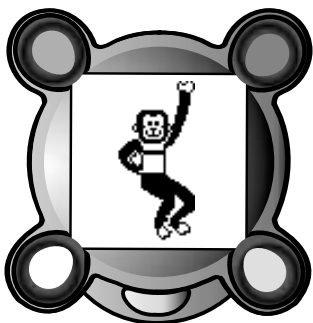

- If you choose correctly, watch the fun animation!
- If you choose incorrectly, Kasey shows you the correct answer. Try again and answer another question.




# Play Pinball Shapes and Patterns

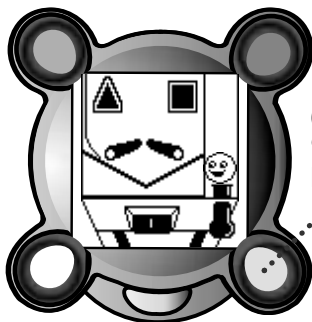 


**Green  
Selection  
Button**

 - Press the green selection button to launch the ball.

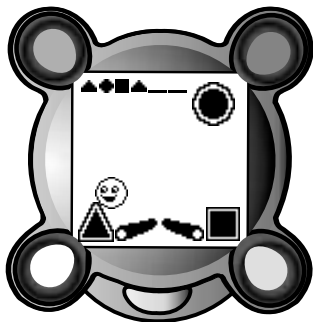


- The pinball bounces off the shapes and makes a pattern on the screen.




**Hint:** When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



# Play Pinball Shapes and Patterns

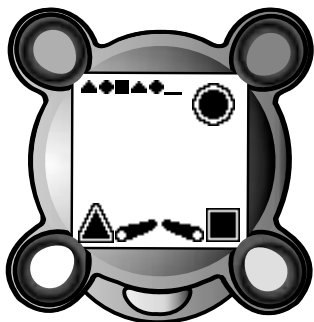 

 - Listen and watch Kasey show you the emerging pattern.

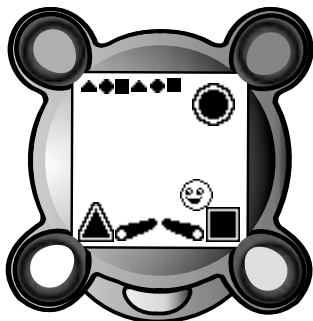


- Kasey adds the next shape in the pattern.






# Play Pinball Shapes and Patterns

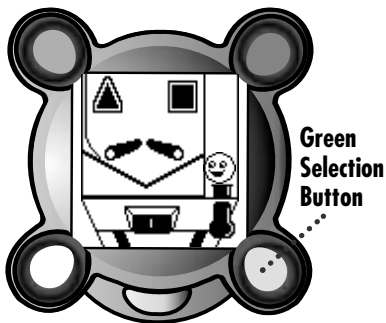 

 - Now it's your turn. Press the green selection button to launch the ball.

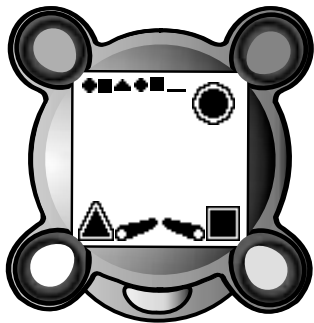


- The pinball bounces off the shapes and makes a pattern on the screen.









# Play Pinball Shapes and Patterns

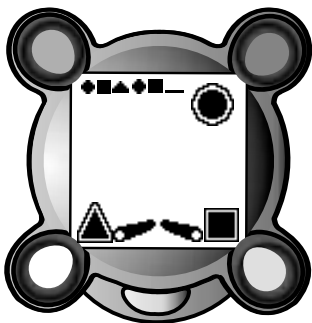 

 - Complete the pattern and select the next shape.

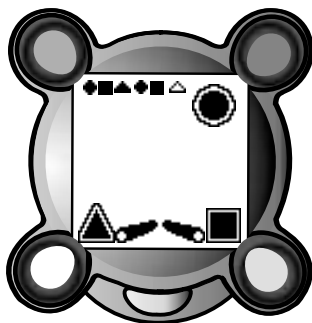


 - If you choose correctly, great job!
- If you choose incorrectly, Kasey asks you to try again.

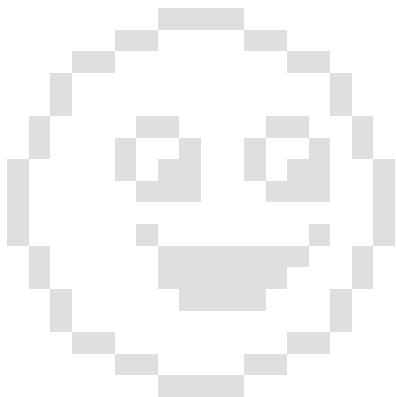




# Play Pinball Shapes and Patterns

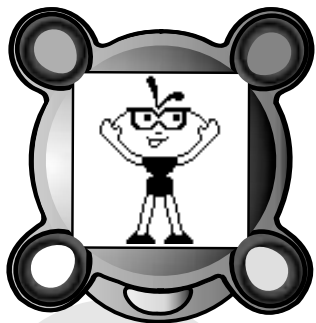 

- It's time to move and stretch.

 "I think  
I need to  
stretch!"

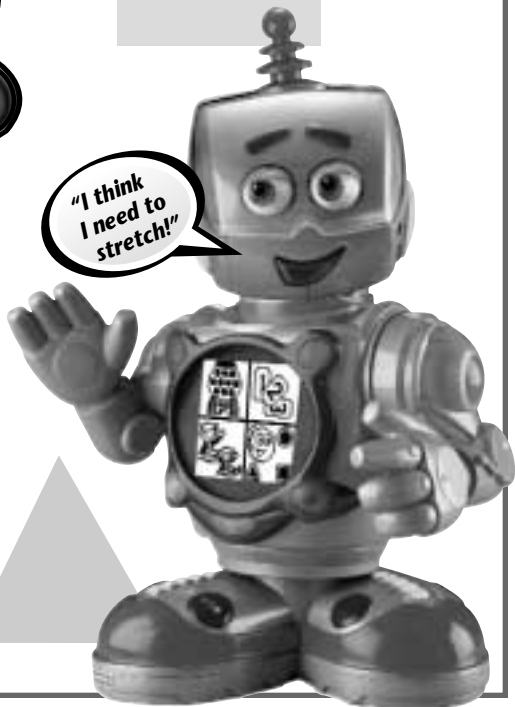

## Care

- Keep water, sand and dirt off of this cartridge.
- Keep this cartridge away from direct sunlight and excessive heat.
- Do not immerse the cartridge. Simply wipe the outside of the cartridge with a cloth to clean.
- This cartridge has no consumer serviceable parts. Please do not take this cartridge apart.

## One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Kasey the Kinderbot™ Numbers & Counting is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. **This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.**

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**

# Consumer Information

## Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price®  
Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

For other countries, outside the United States:

**Canada:** call 1-800-567-7724, or write to: Mattel Canada Inc.,  
6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone **01628 500302.**

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.



Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.