 


Fisher-Price **Kasey**
the
Kinderbot™
LEARNING SYSTEM



Reading
Words & Sentences™

"Let's
play some
word
games!"

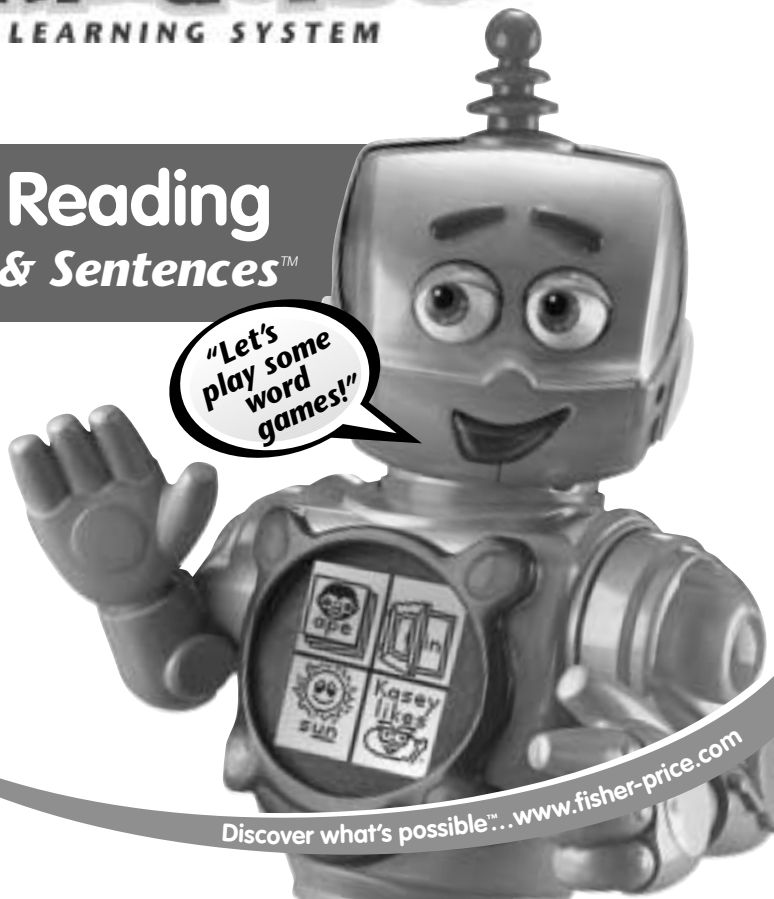

Discover what's possible™... www.fisher-price.com

Getting Started

Please keep this manual for future reference, as it contains important information.

Before inserting the software cartridge, turn power off by pressing the On/Off button on the top of Kasey's foot. Insert the software cartridge into the software port and Kasey automatically turns back on!



Fun for All!

 
Choose an activity from the Main Menu: **Animal Cards**, **Hide and Seek Words**, **Letter Endings** and **Picture Sentences**. Press a colored selection button to make your choice.

Animal Cards

*Press the red selection button.
Match the animal to its name
and learn to spell them!*

Hide and Seek Words

*Press the blue selection button.
Chip likes to hide words. Open
the cupboard doors to find them!*

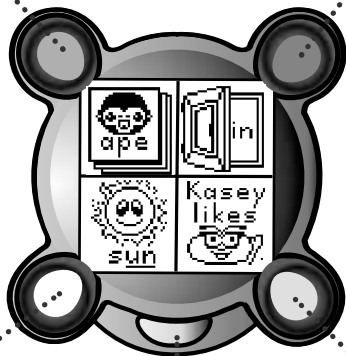

Letter Endings

*Press the yellow selection button.
Play a game, learn about word endings
and sing along with the Letter Fun Song!*

Picture Sentences

 
*Press the green selection button.
Pick a picture to complete
the sentence.*

Home Button


Press the Home Button to return to the Main Menu at any time.



Animal Cards

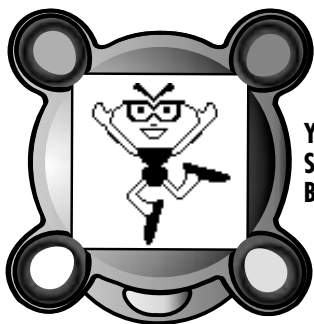

Yellow
Selection
Button

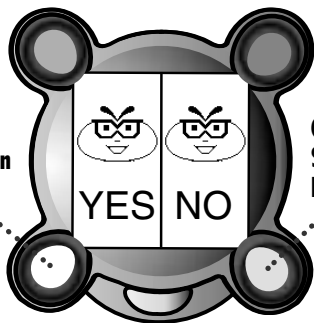 

Green
Selection
Button

 
- Let's listen to a fun song and sing-a-long!

- When the music is complete, you can play it again (press the yellow selection button for yes) or you can continue in this activity (press the green selection button for no).







Animal Cards

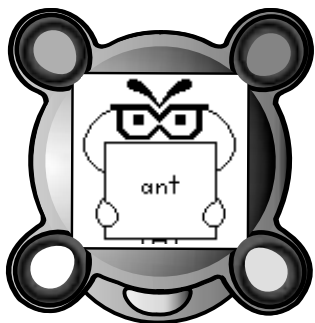

 - First, listen and learn three words and a picture that matches!

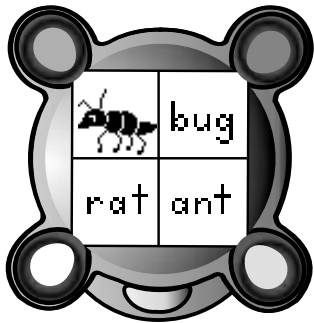


 - Now, it's your turn. Find the word that matches the picture in the upper left corner. Press the colored selection button next to your choice.

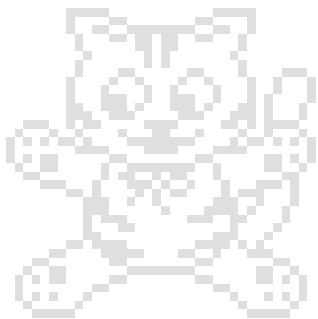




Animal Cards

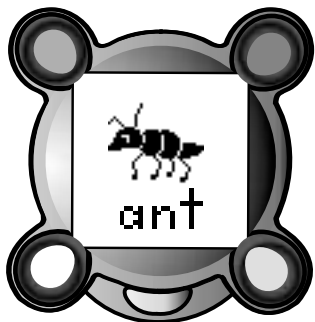 

 - If you choose correctly, you have a match. "Give me five!"

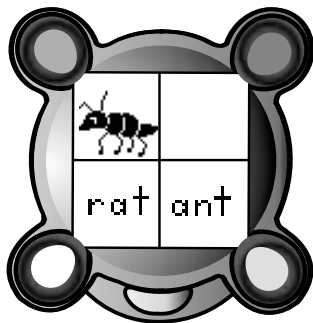


- If you choose incorrectly, Kasey removes that choice. Try again!






 Animal Cards


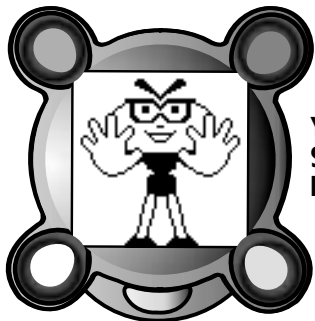


Yellow
Selection
Button

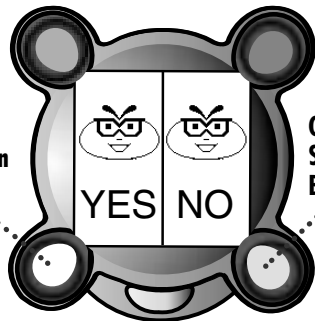 


Green
Selection
Button

  - It's time to sing and dance with Kasey and Chip™.
- When the music is complete, you can play it again (press the yellow selection button for yes) or you can continue in this activity (press the green selection button for no).

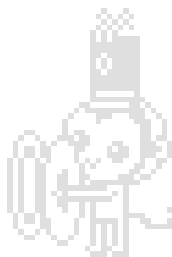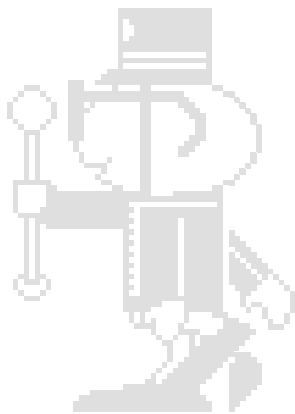




Hide and Seek Words

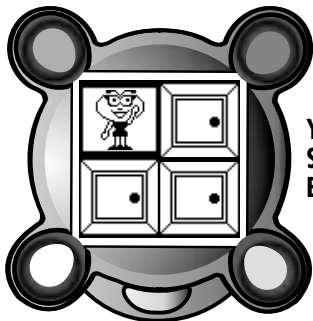 

**Yellow
Selection
Button**

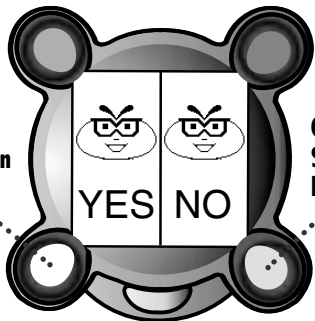 

**Green
Selection
Button**

- Let's listen to a letter song.
- When the music is complete, you can play it again (press the yellow selection button for yes) or you can continue in this activity (press the green selection button for no).

heart

 
circle

birds

cow




Hide and Seek Words

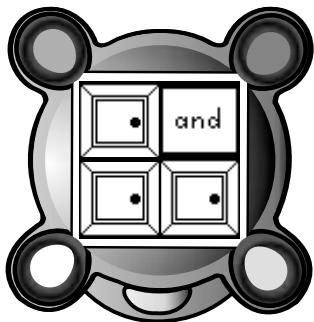

- Watch as Kasey shows you where the word is hidden.

 Hint: Pay close attention so that you can help him find it later.

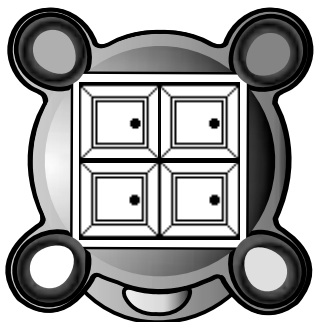


- Push the colored selection button next to where the word is hiding.


ape apple
 rabbit
banana



 Hide and Seek Words

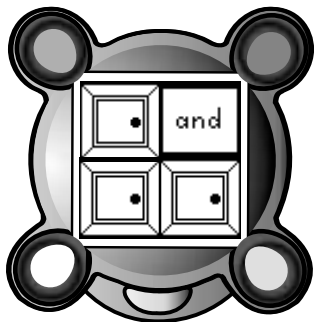

 - If you choose correctly, "Yeah, you got it!"

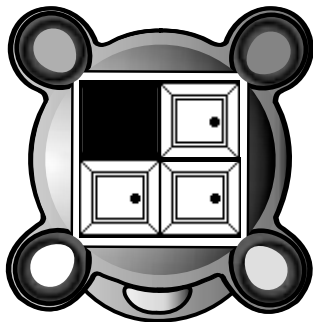

- If you choose incorrectly, Kasey removes that choice. Try again!

Hint: Watch carefully, Kasey may give you a hint!

candy

cookies

 
 
diamond

baseball




Letter Endings

Red Selection Button

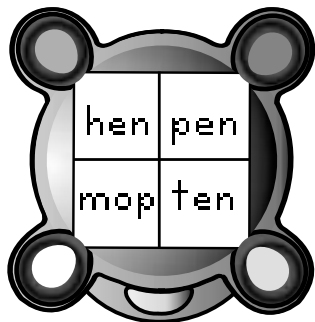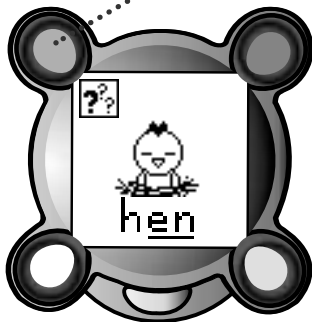


- Let's listen to a fun song about a family of words that have the same letter endings.
- Which word ends with *different letters*? Press the colored selection button next to your choice.




Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



 Letter Endings

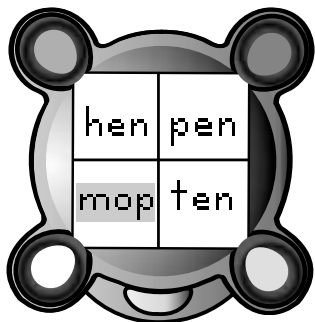

 - If you choose correctly, "You make my circuits happy!"

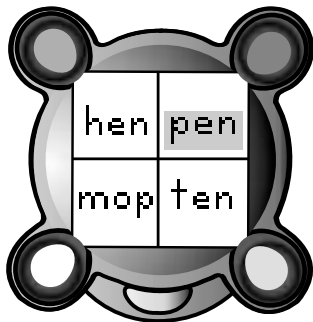

- If you choose incorrectly, Kasey asks you to look for the word that ends with *two different letters*.

 




Letter Endings




- Let's open the door to *imagination*. It's time for a fun activity.

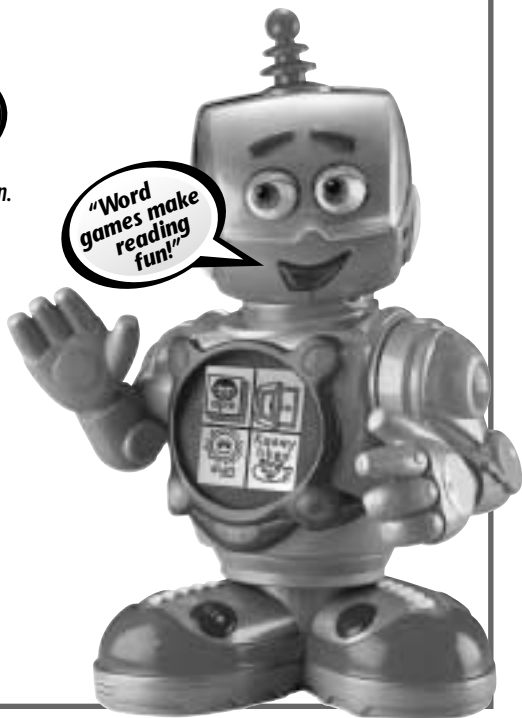



Picture Sentences



 - Watch closely. Kasey shows you how to complete a sentence using the pictures.
- Now, it's your turn. Pick a picture to complete the sentence. Press the colored button next to your choice.

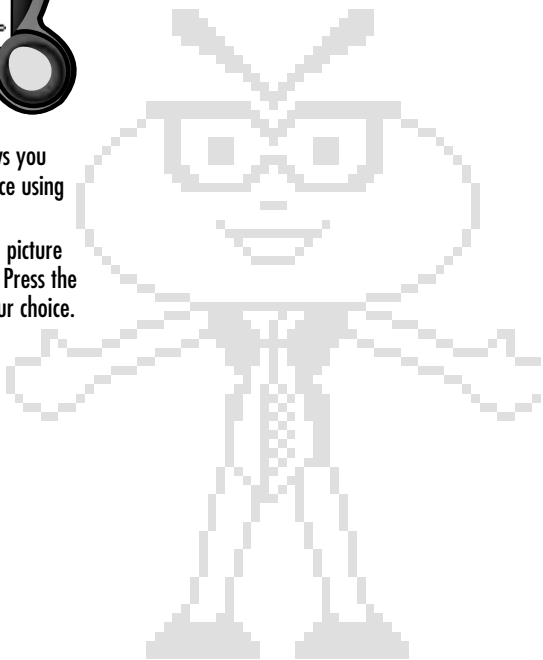

Picture Sentences

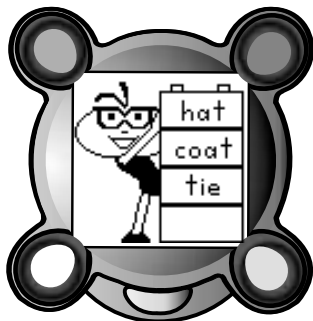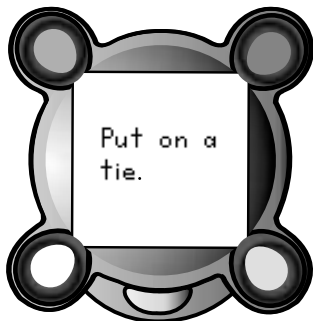  


- Listen and see the sentence you created.
- Now, watch as Kasey stacks the words that you chose. "Yeah, you got it!"



Picture Sentences



 Yellow
Selection
Button

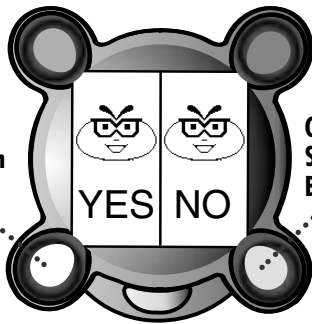

Green
Selection
Button

- Let's open the door to *imagination*. Stretch and sing-along with Kasey and Chip™.
- When the music is complete, you can play it again (press the yellow selection button for yes) or you can continue in this activity (press the green selection button for no).



Care

- Keep water, sand and dirt off of this cartridge.
- Keep this cartridge away from direct sunlight and excessive heat.
- Do not immerse the cartridge. Simply wipe the outside of the cartridge with a cloth to clean.
- This cartridge has no consumer serviceable parts. Please do not take this cartridge apart.



One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants to the original purchaser that Kasey the Kinderbot™ Reading Words and Sentences™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. **This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price®
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052, U.S.A.

For countries outside the United States:

CANADA

Questions? **1-800-567-7724**, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

B1363pr-0920