 


DING-A-LING SHOESHINE INSTRUCTION SHEET

 
DO NOT THROW THIS SHEET AWAY. READ ALL INSTRUCTIONS CAREFULLY.

CONTENTS: 1 SHOESHINE, 1 BRUSH, 1 SHOESHINE CLOTH

HOW TO ATTACH SHOESHINE CLOTH

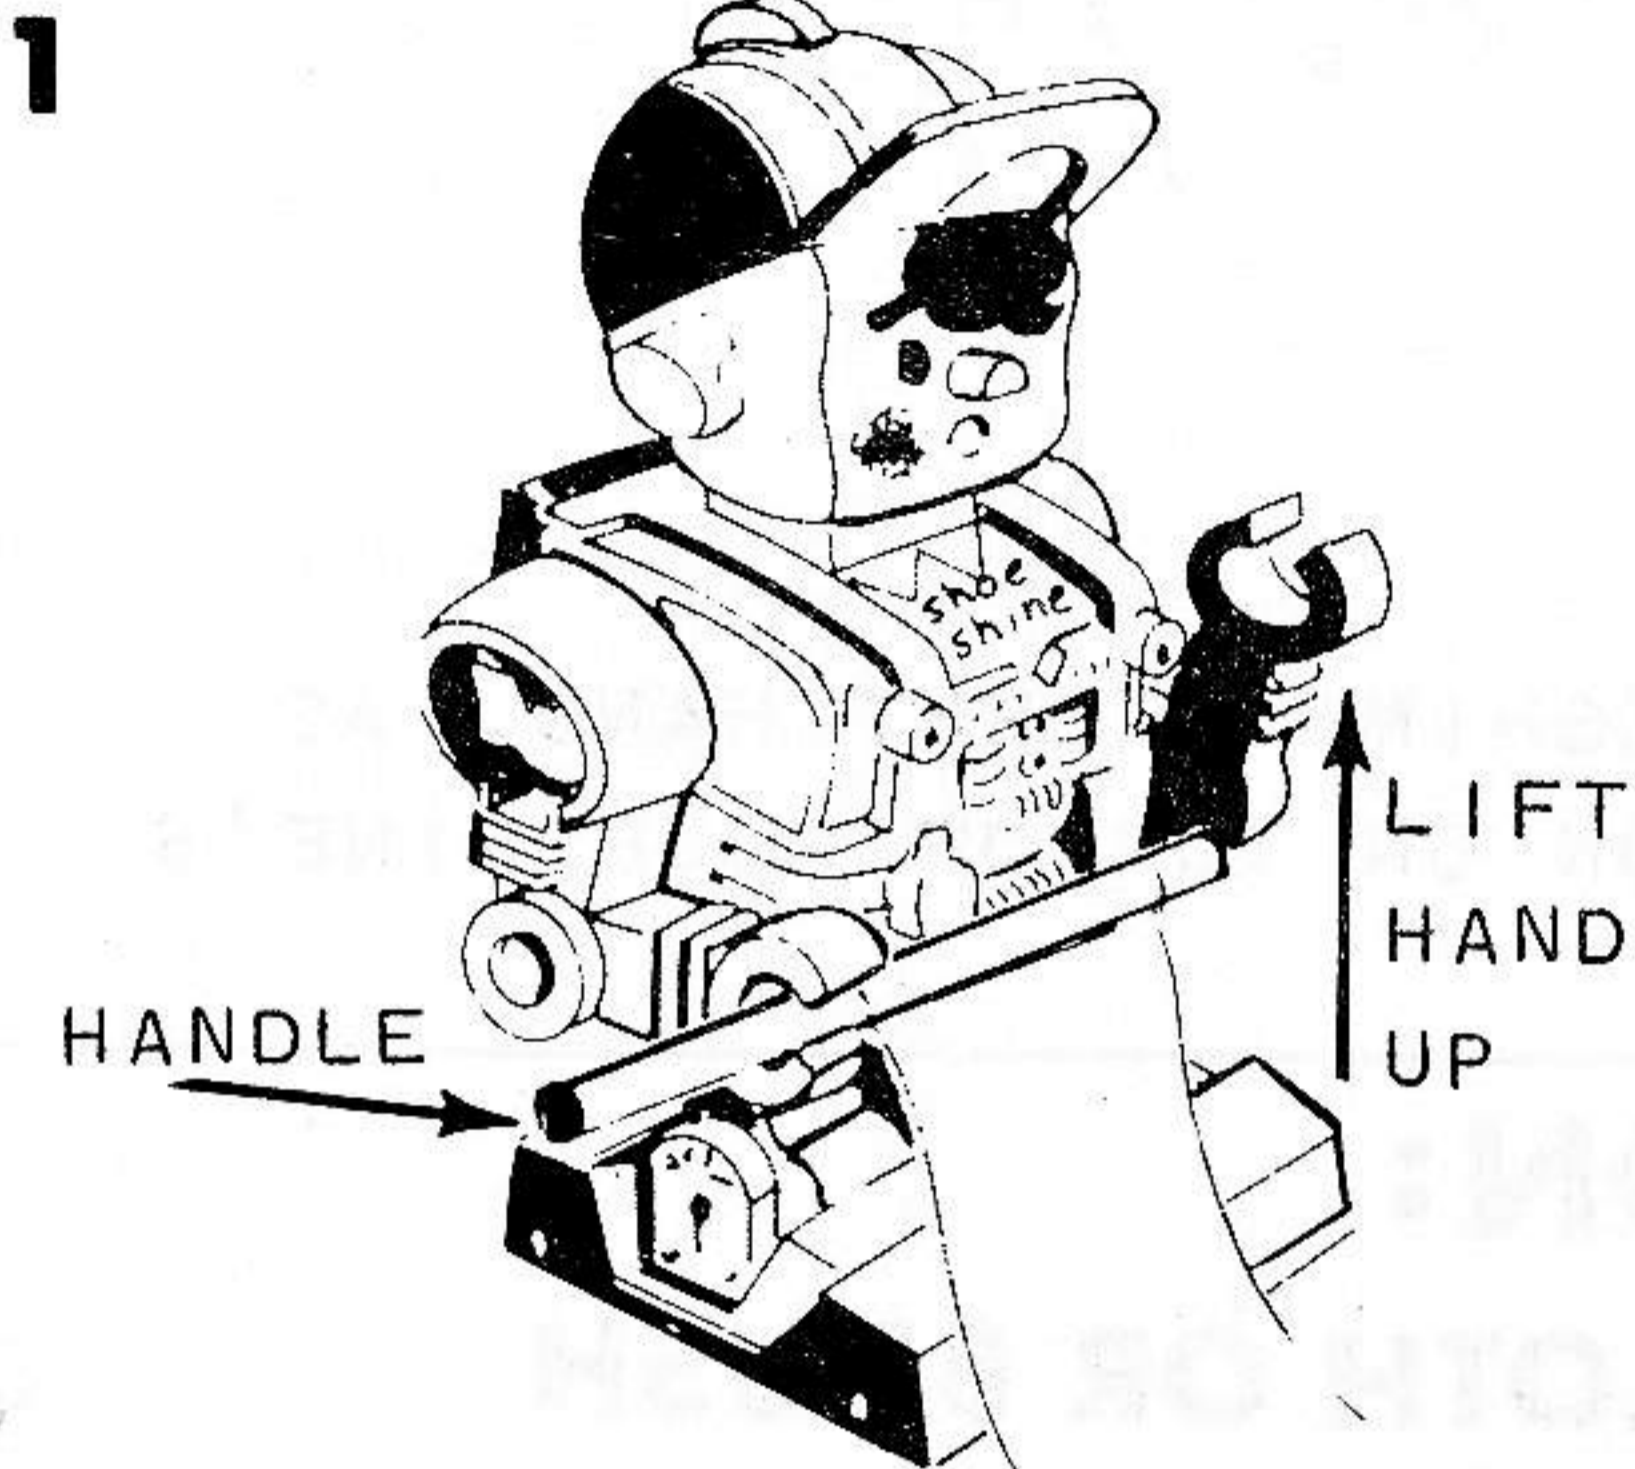


LIFT UP LEFT ARM. SLIDE HANDLE ALL THE WAY INTO HIS RIGHT HAND.

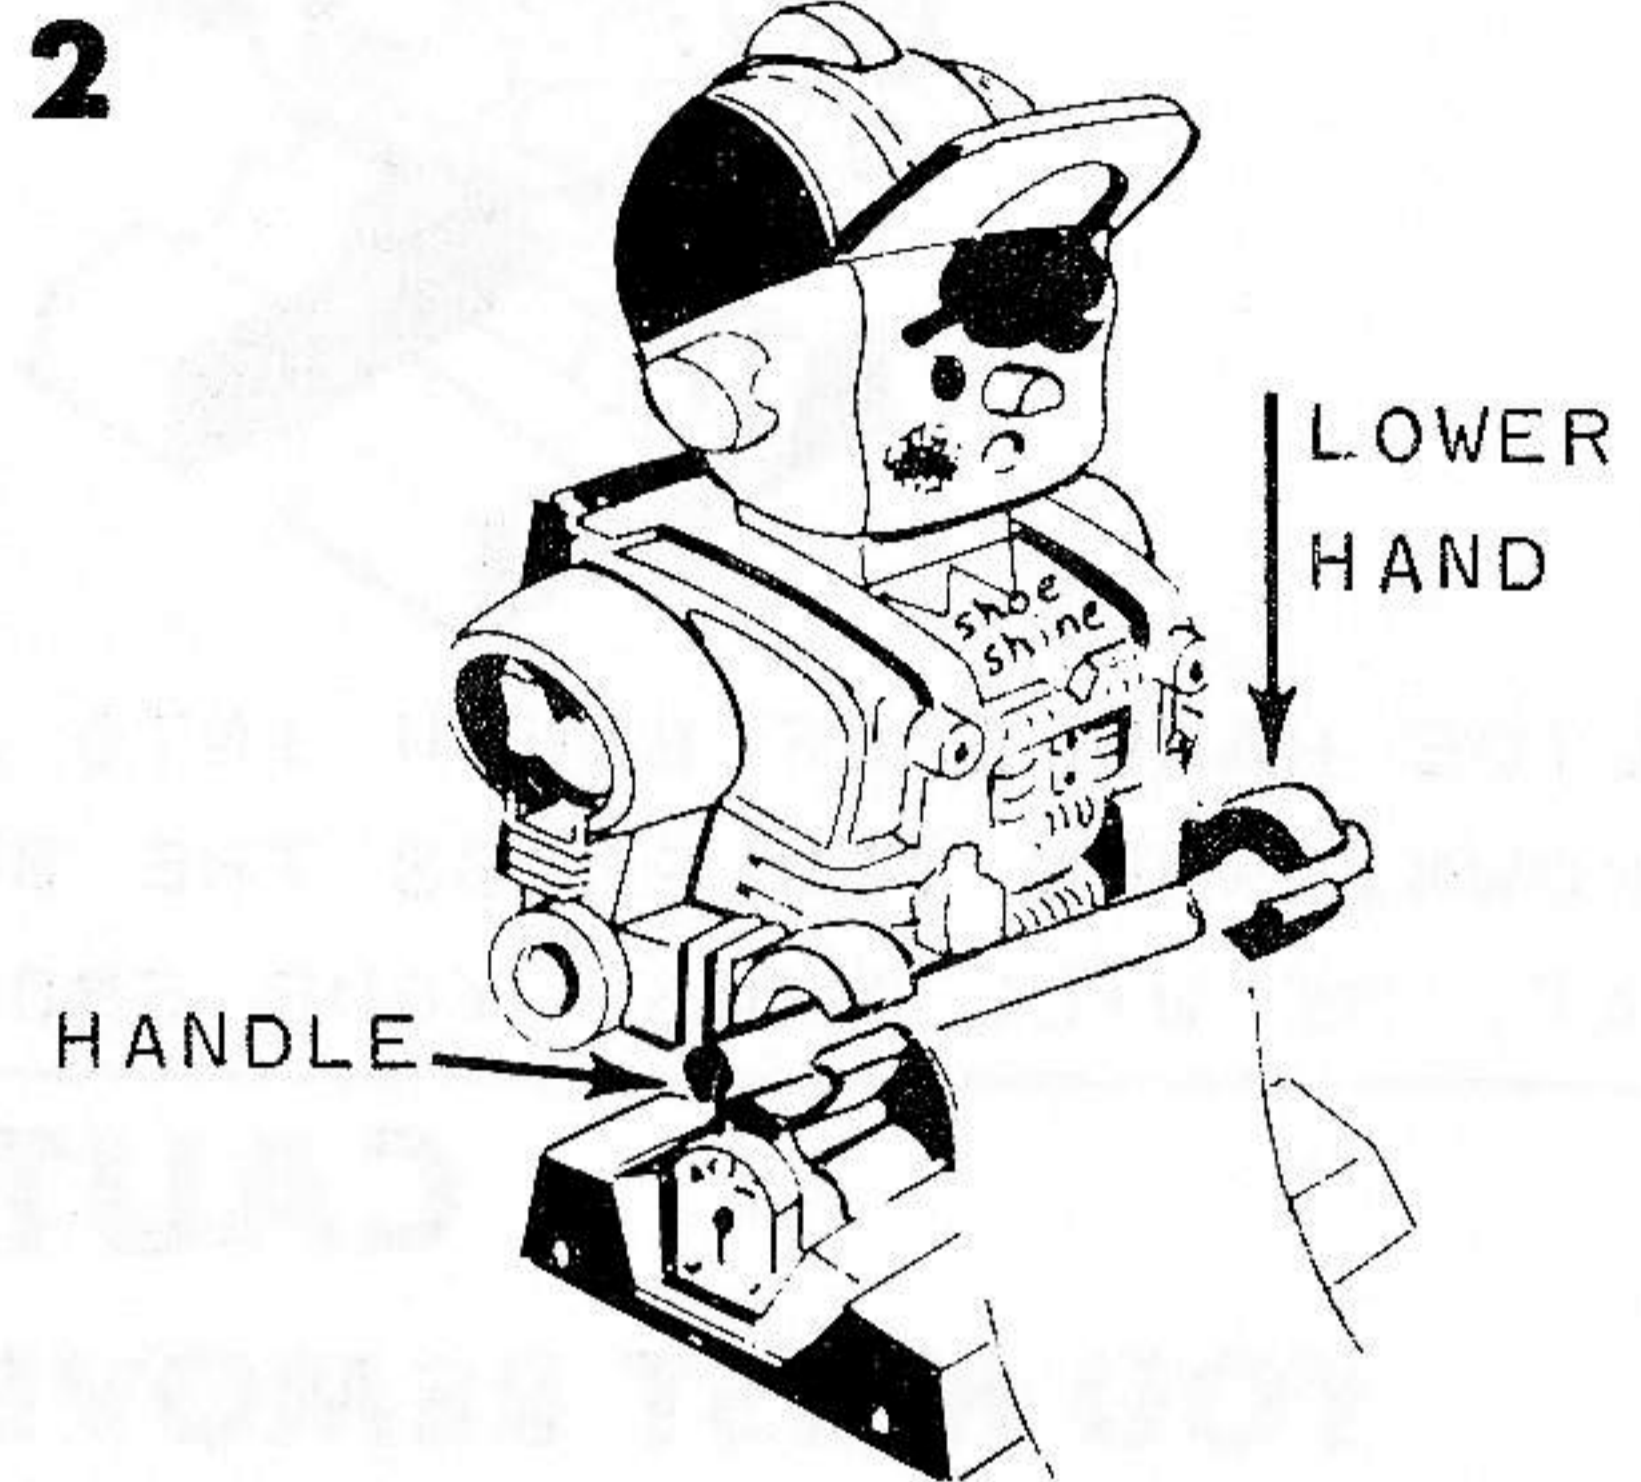

LOWER HIS LEFT ARM AND SLIDE HANDLE INTO LEFT HAND.

 HOW TO PLAY WITH YOUR SHOESHINE

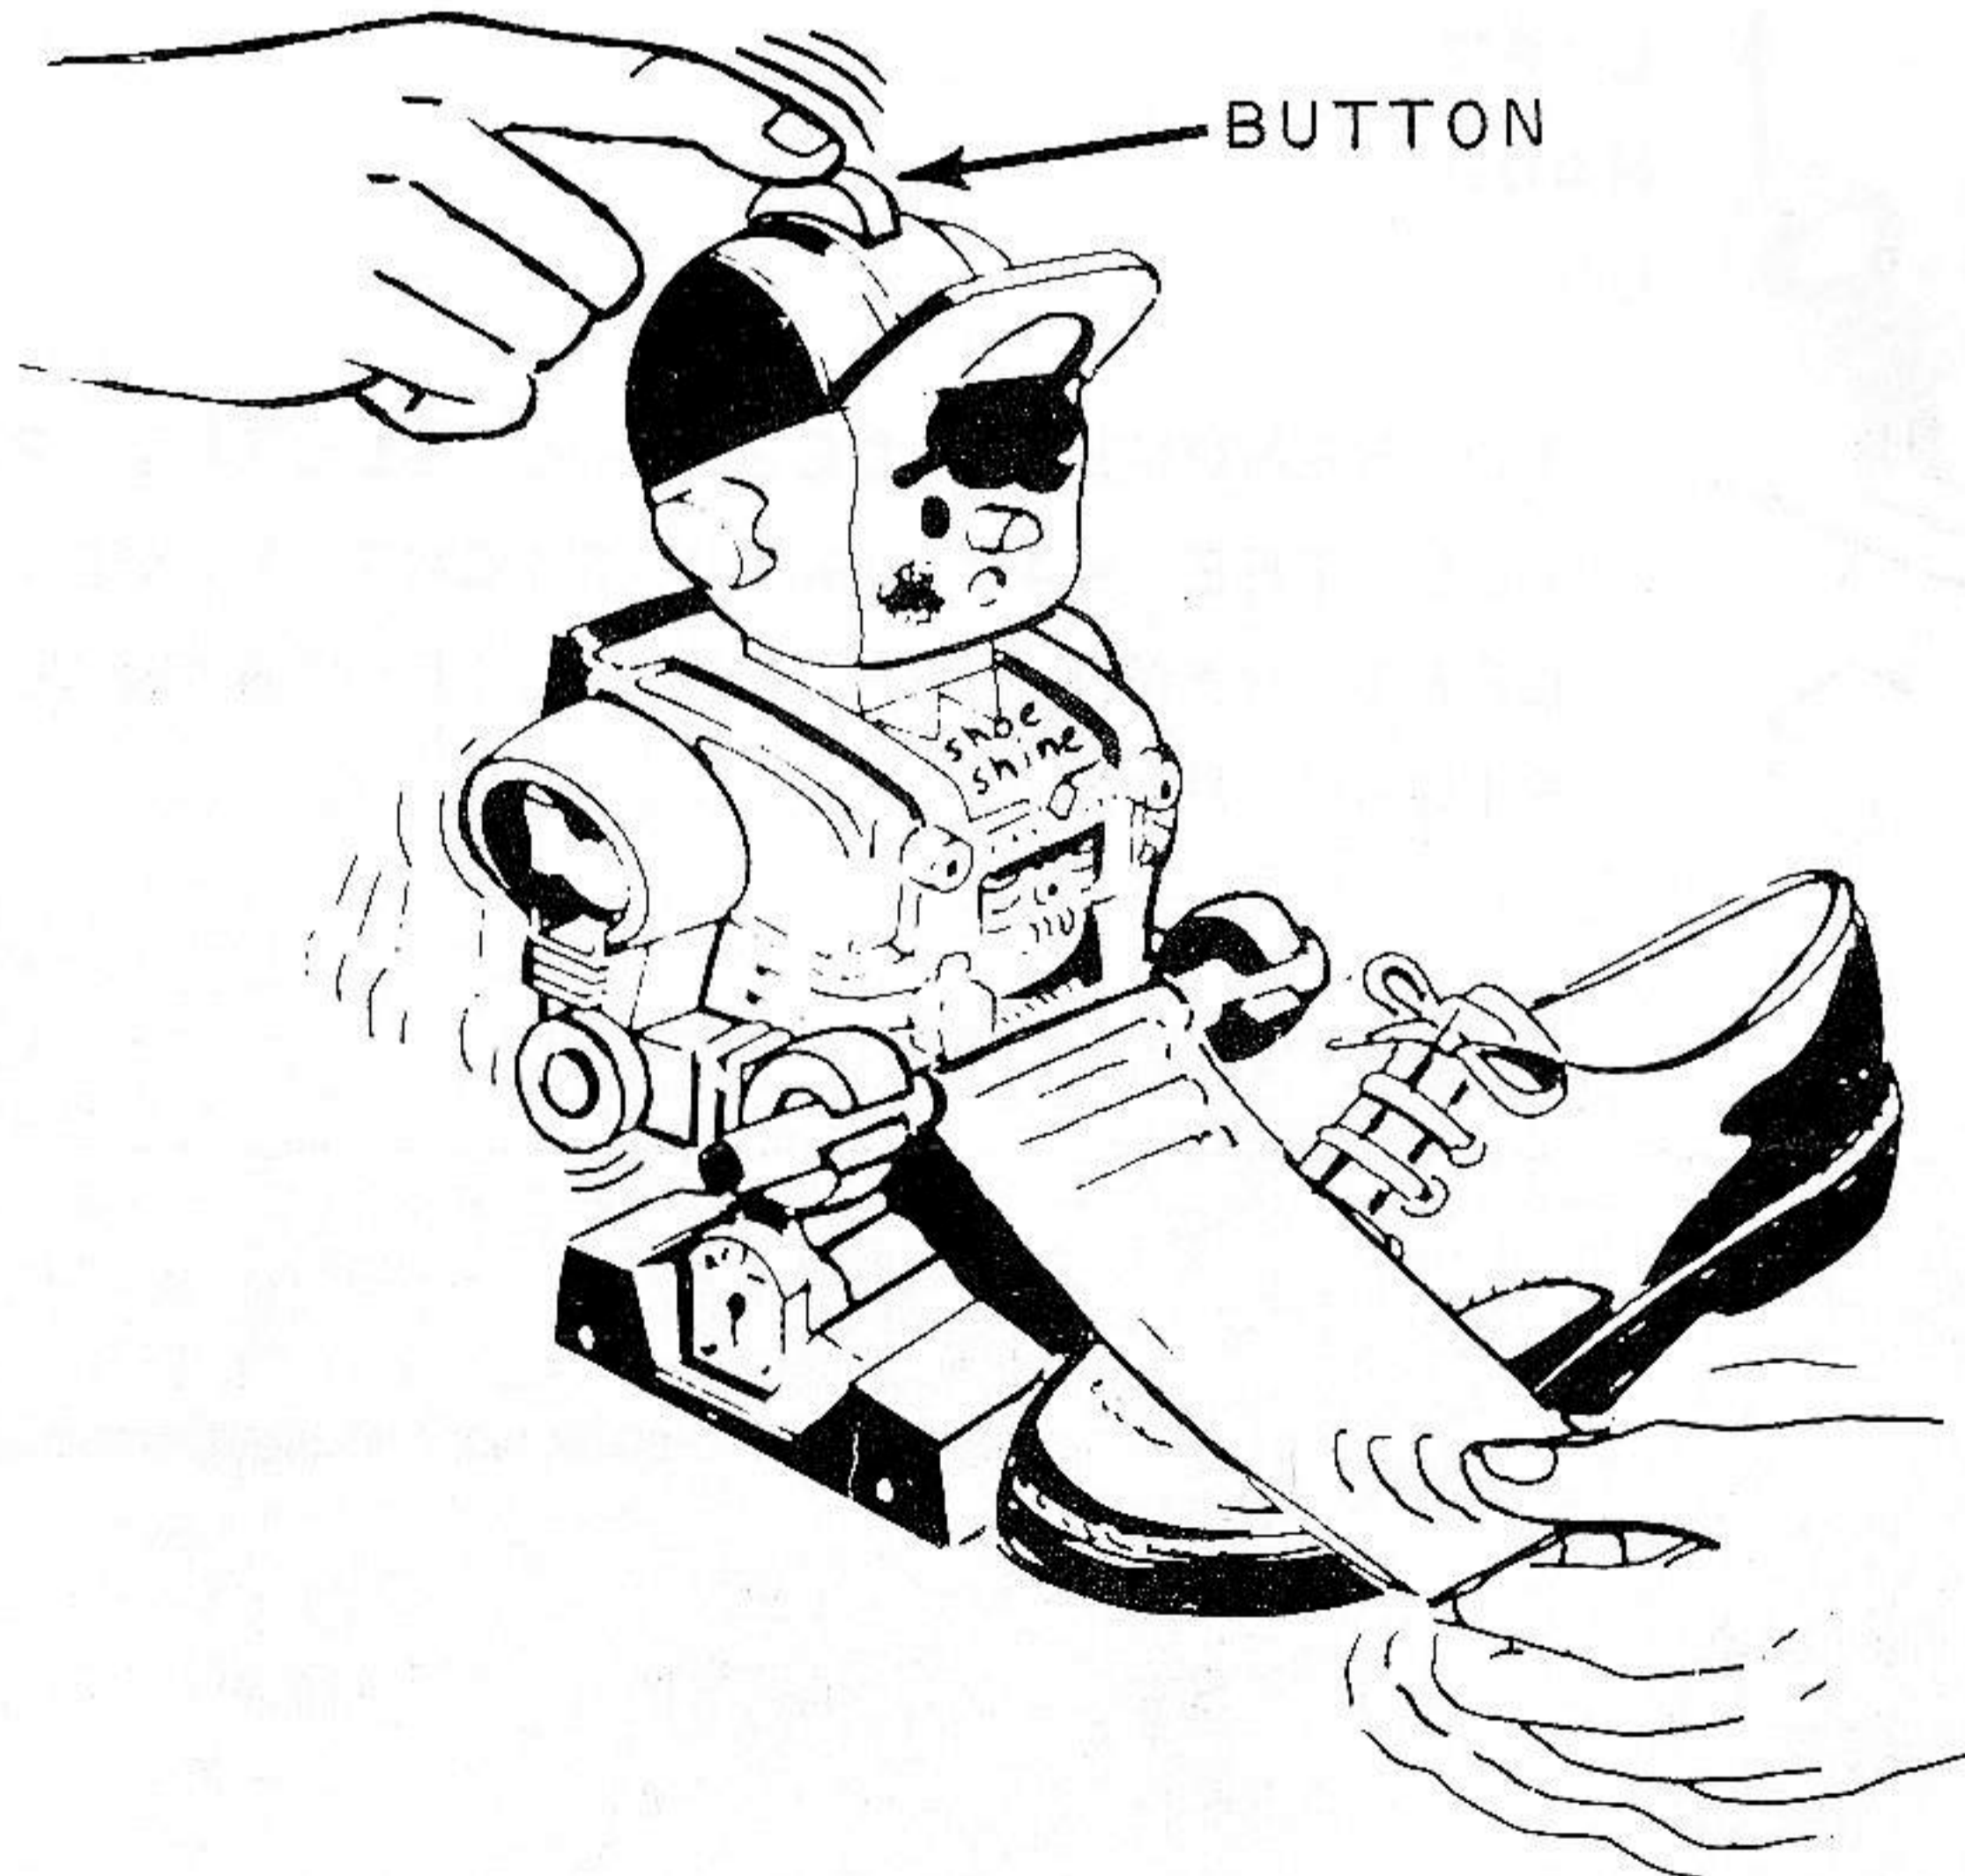

WHEN YOU PRESS THE BUTTON ON TOP OF SHOESHINE'S HAT, HE WILL HELP YOU SHINE YOUR SHOES.

 


©1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206

3027-0030

PRINTED IN U.S.A.


HOW TO ATTACH SHOESHINE'S BRUSH

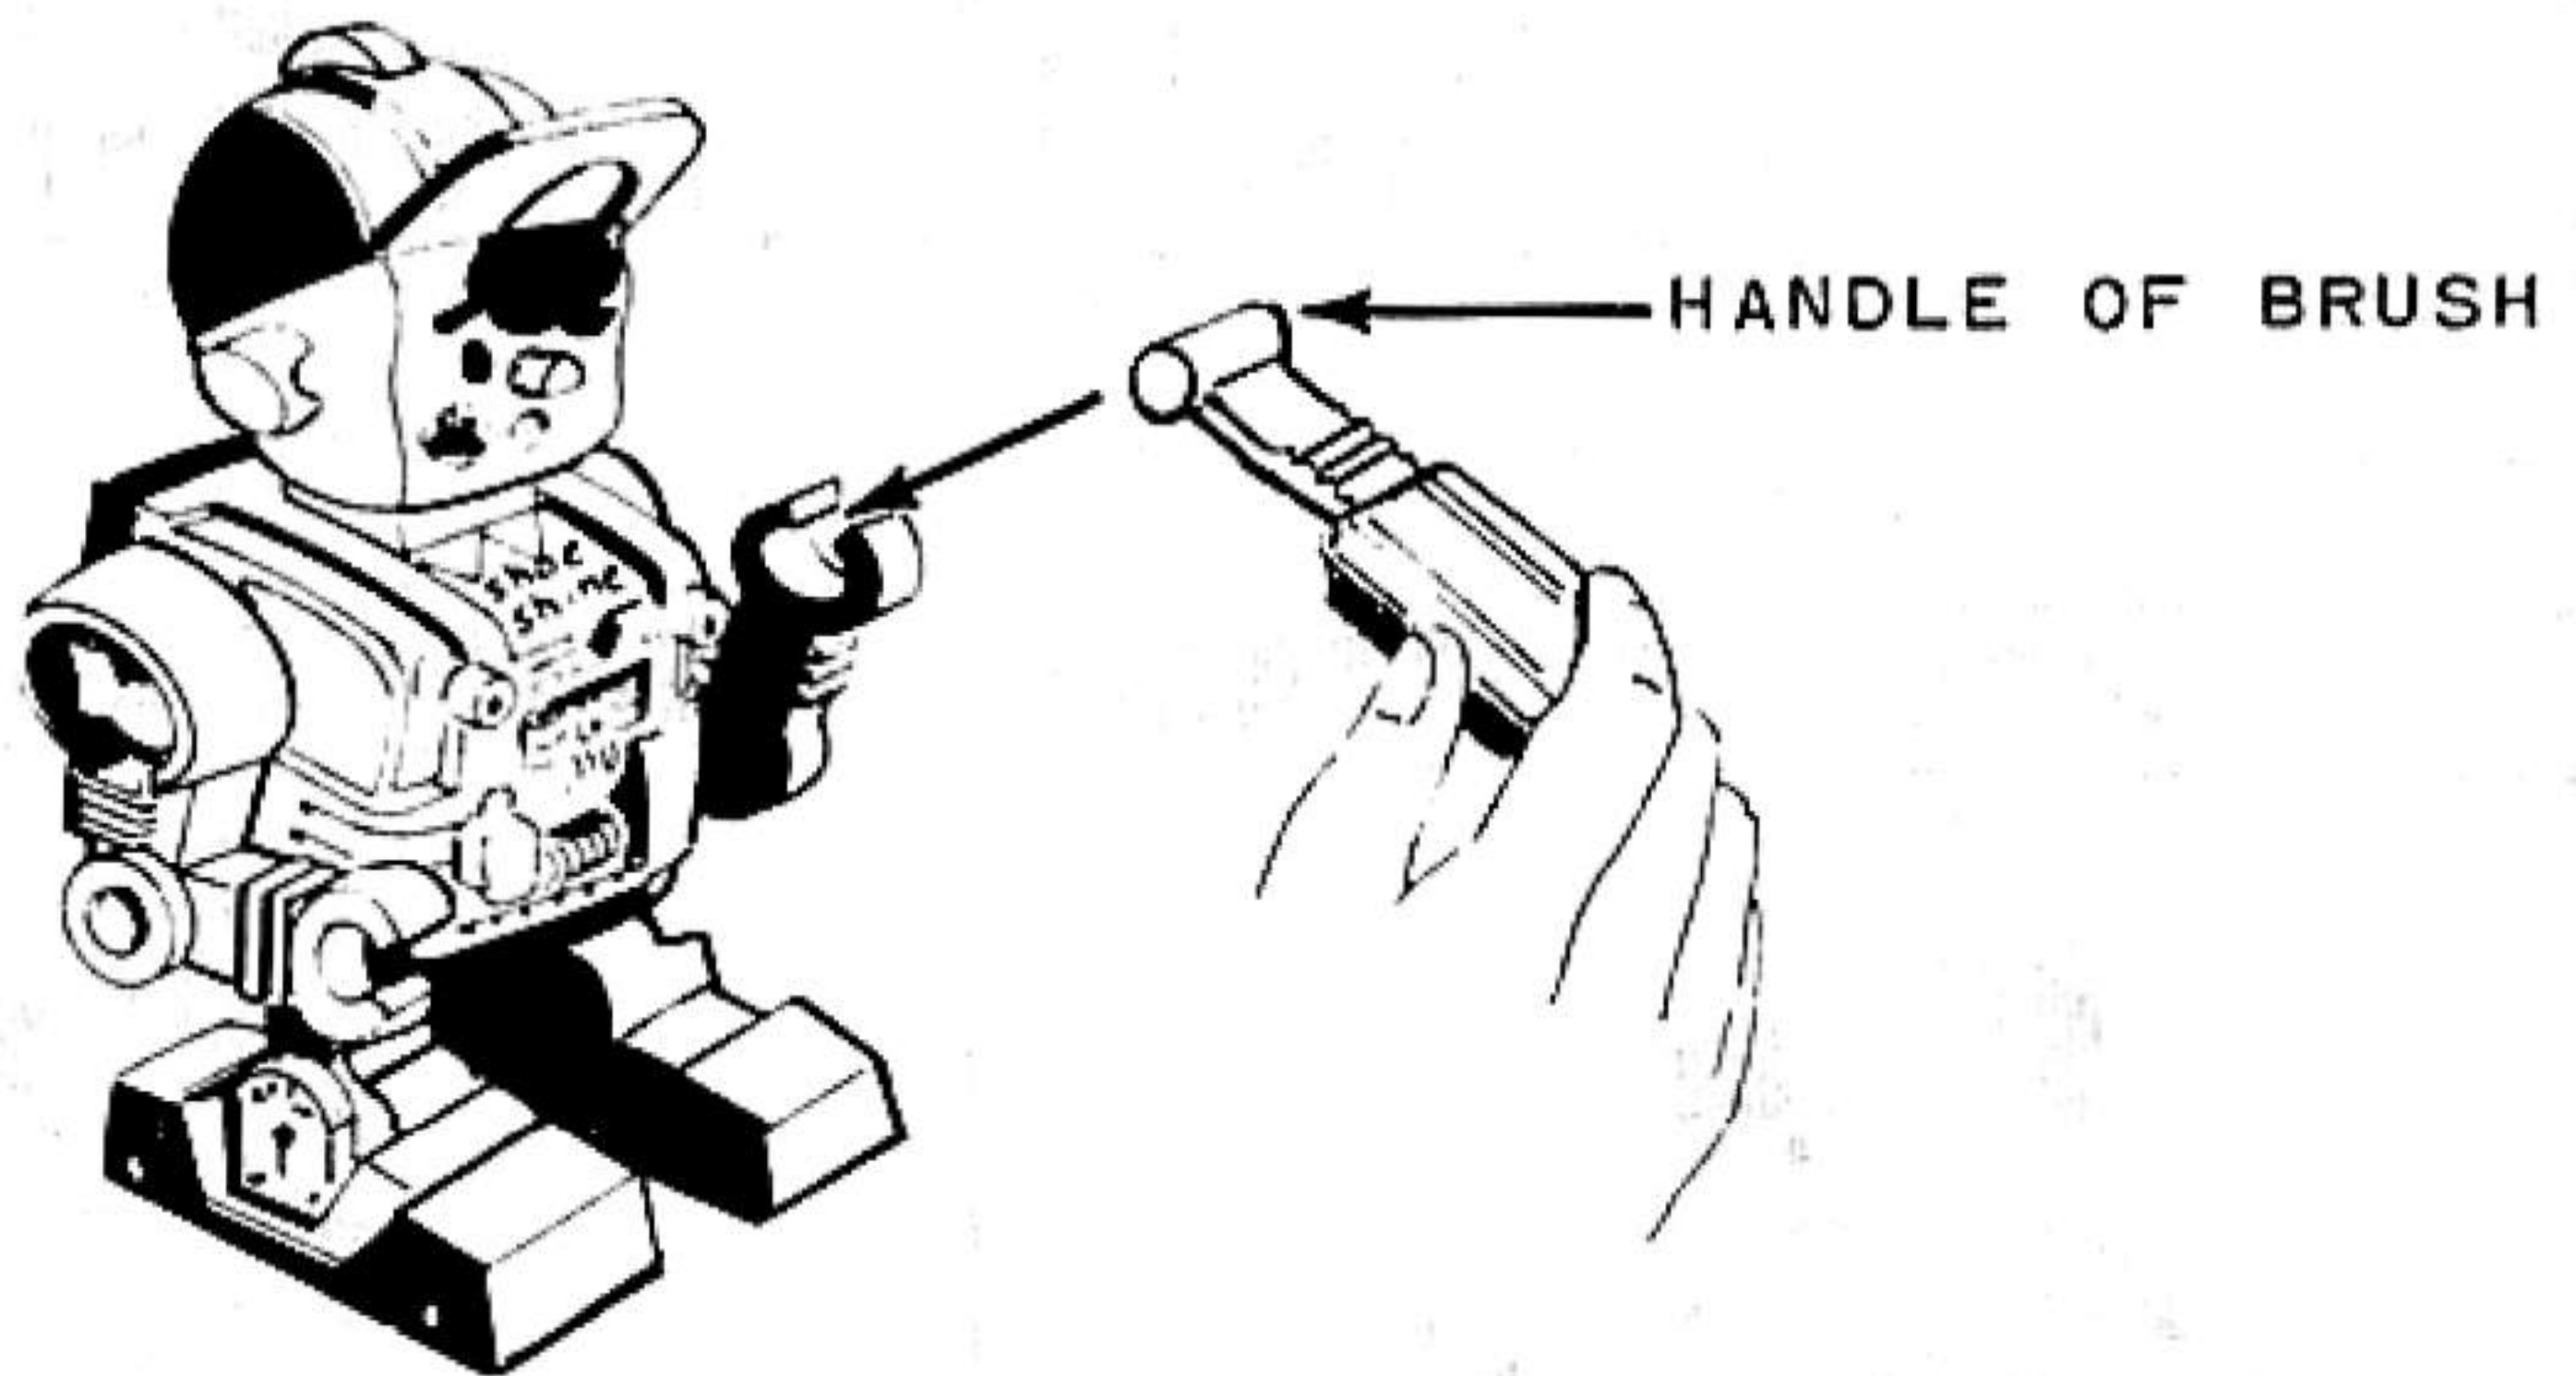

SLIDE HANDLE OF BRUSH INTO SHOESHINE'S LEFT HAND, AS SHOWN. WHEN YOU PRESS THE BUTTON ON TOP OF SHOESHINE'S HAT, HE WILL BRUSH YOUR SHOES.

CAUTION:

 YOU MUST REMOVE CLOTH OR BRUSH BEFORE PUTTING SHOESHINE ON ANY DING-A-LING SPACE SKYWAY SET.

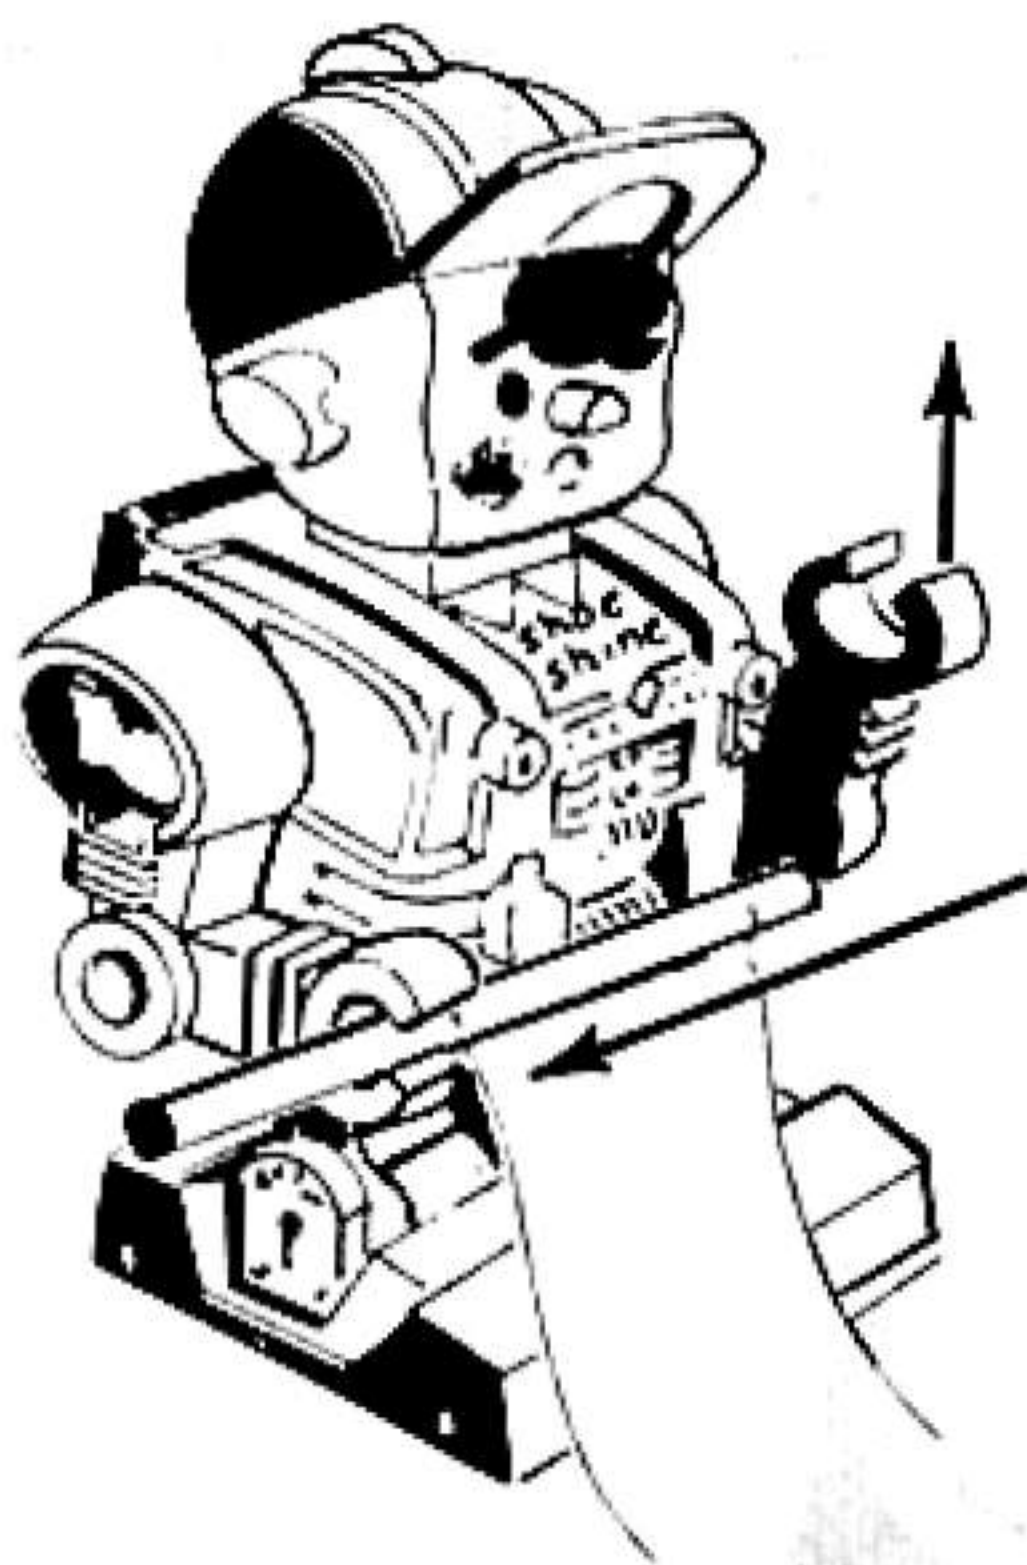


LIFT
HAND
UP

TO REMOVE SHOESHINE CLOTH, PUSH HANDLE ALL THE WAY INTO RIGHT HAND. LIFT LEFT HAND UP AND SLIDE HANDLE OUT OF RIGHT HAND.

IMPORTANT

 FOR BEST RESULTS ON SPACE SKYWAY SETS, PUT A SMALL AMOUNT OF VASELINE® ALL ALONG LEDGES BETWEEN DING-A-LING'S FEET, AS SHOWN. BE SURE TO ADD MORE VASELINE® WHEN NEEDED.

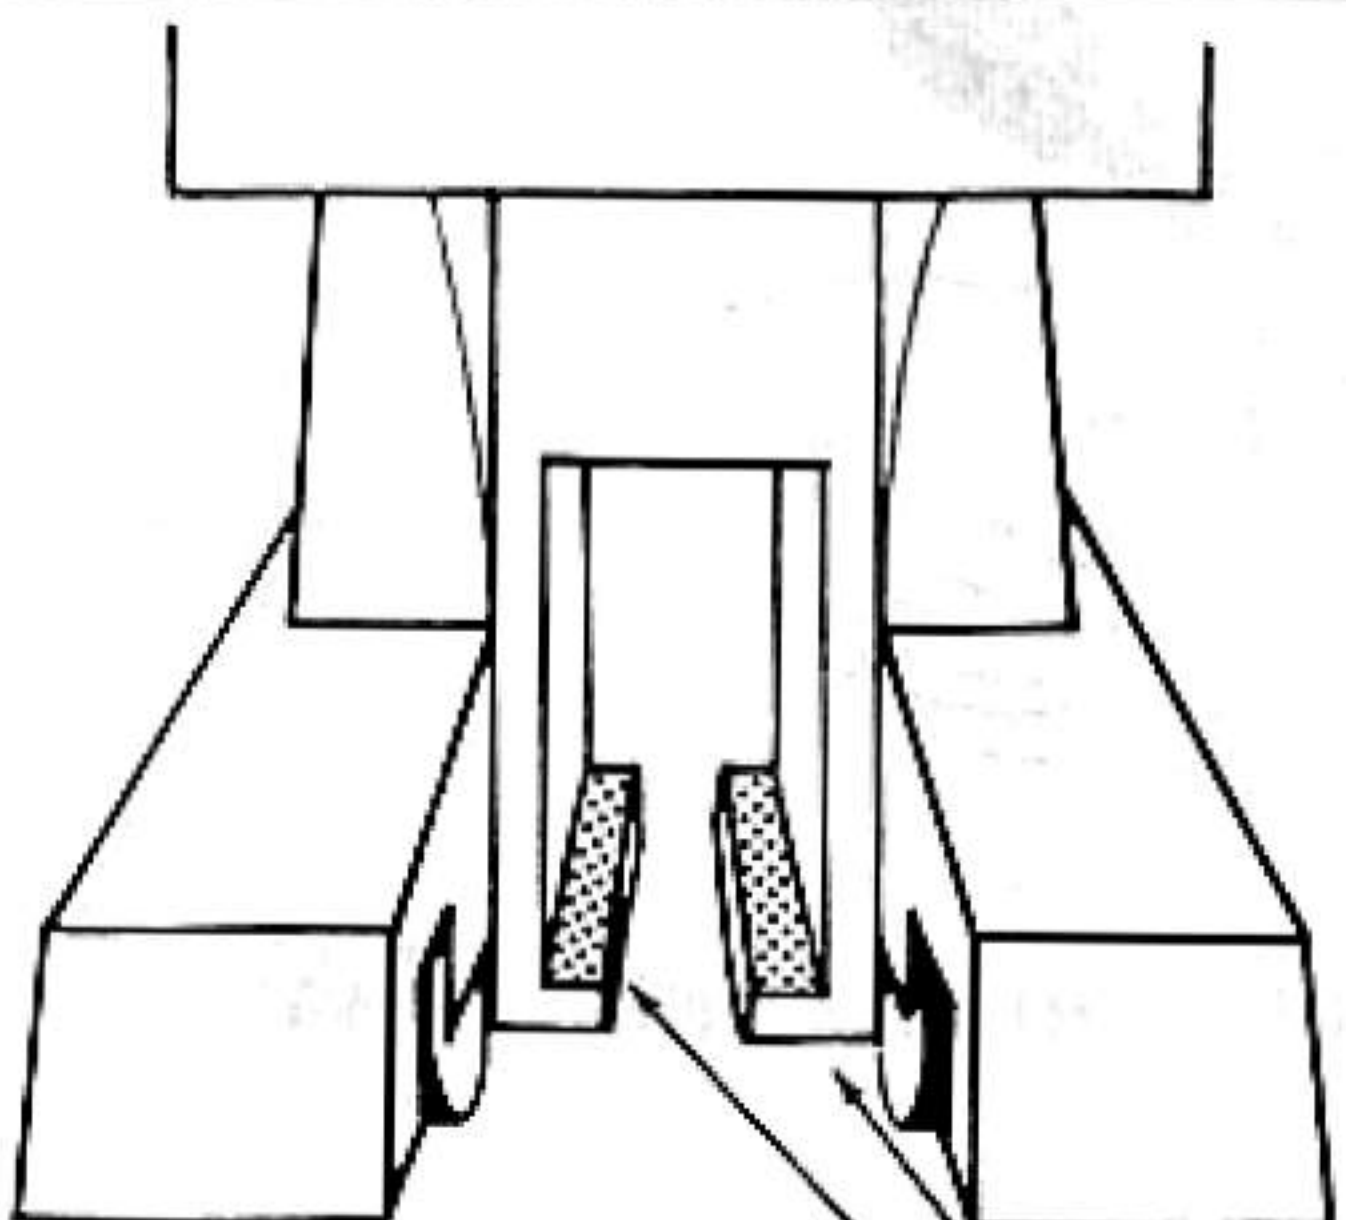

VASELINE®