


DING-A-LING

# FLYING SAUCER INSTRUCTION SHEET

DO NOT THROW THIS SHEET AWAY. READ ALL INSTRUCTIONS CAREFULLY.

## HOW TO PLAY WITH YOUR FLYING SAUCER

1

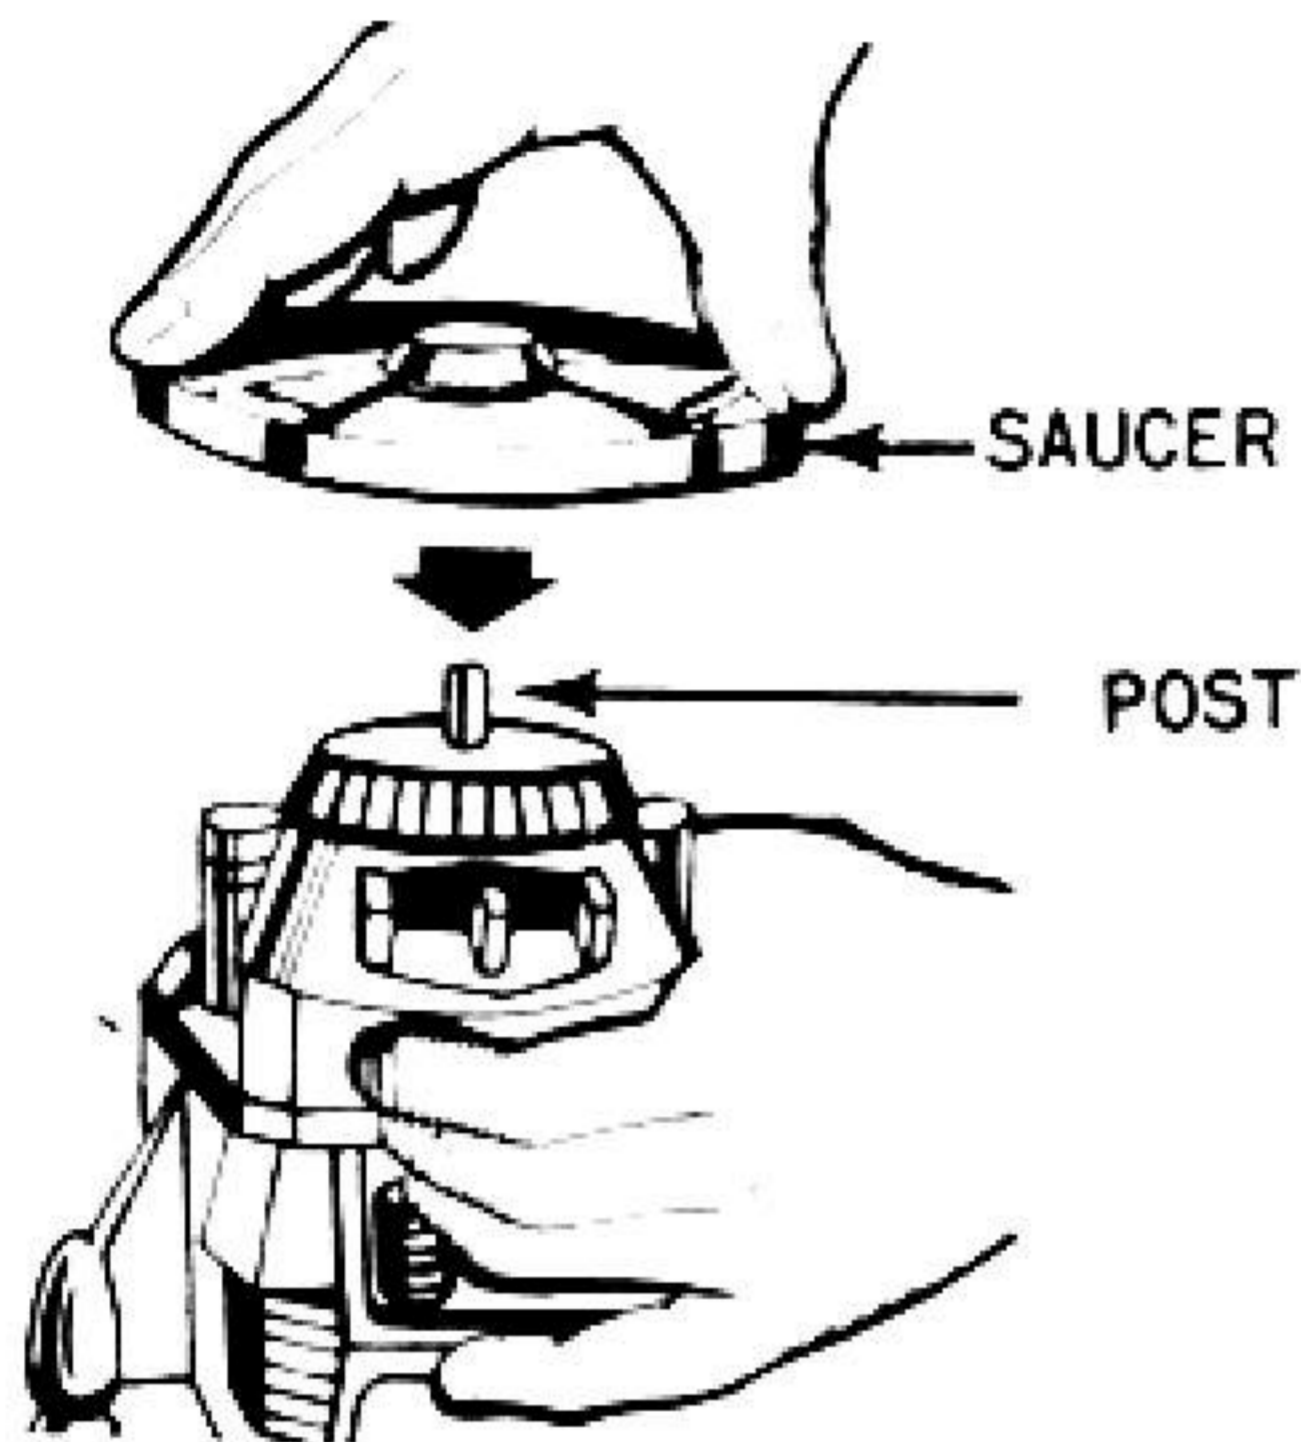


PUT SAUCER ON POST ON FLYING SAUCER'S HEAD, AS SHOWN.

2



TO WIND SAUCER, TURN IT SEVERAL TIMES TO THE LEFT, AS SHOWN. CAUTION: DO NOT OVERWIND.

3

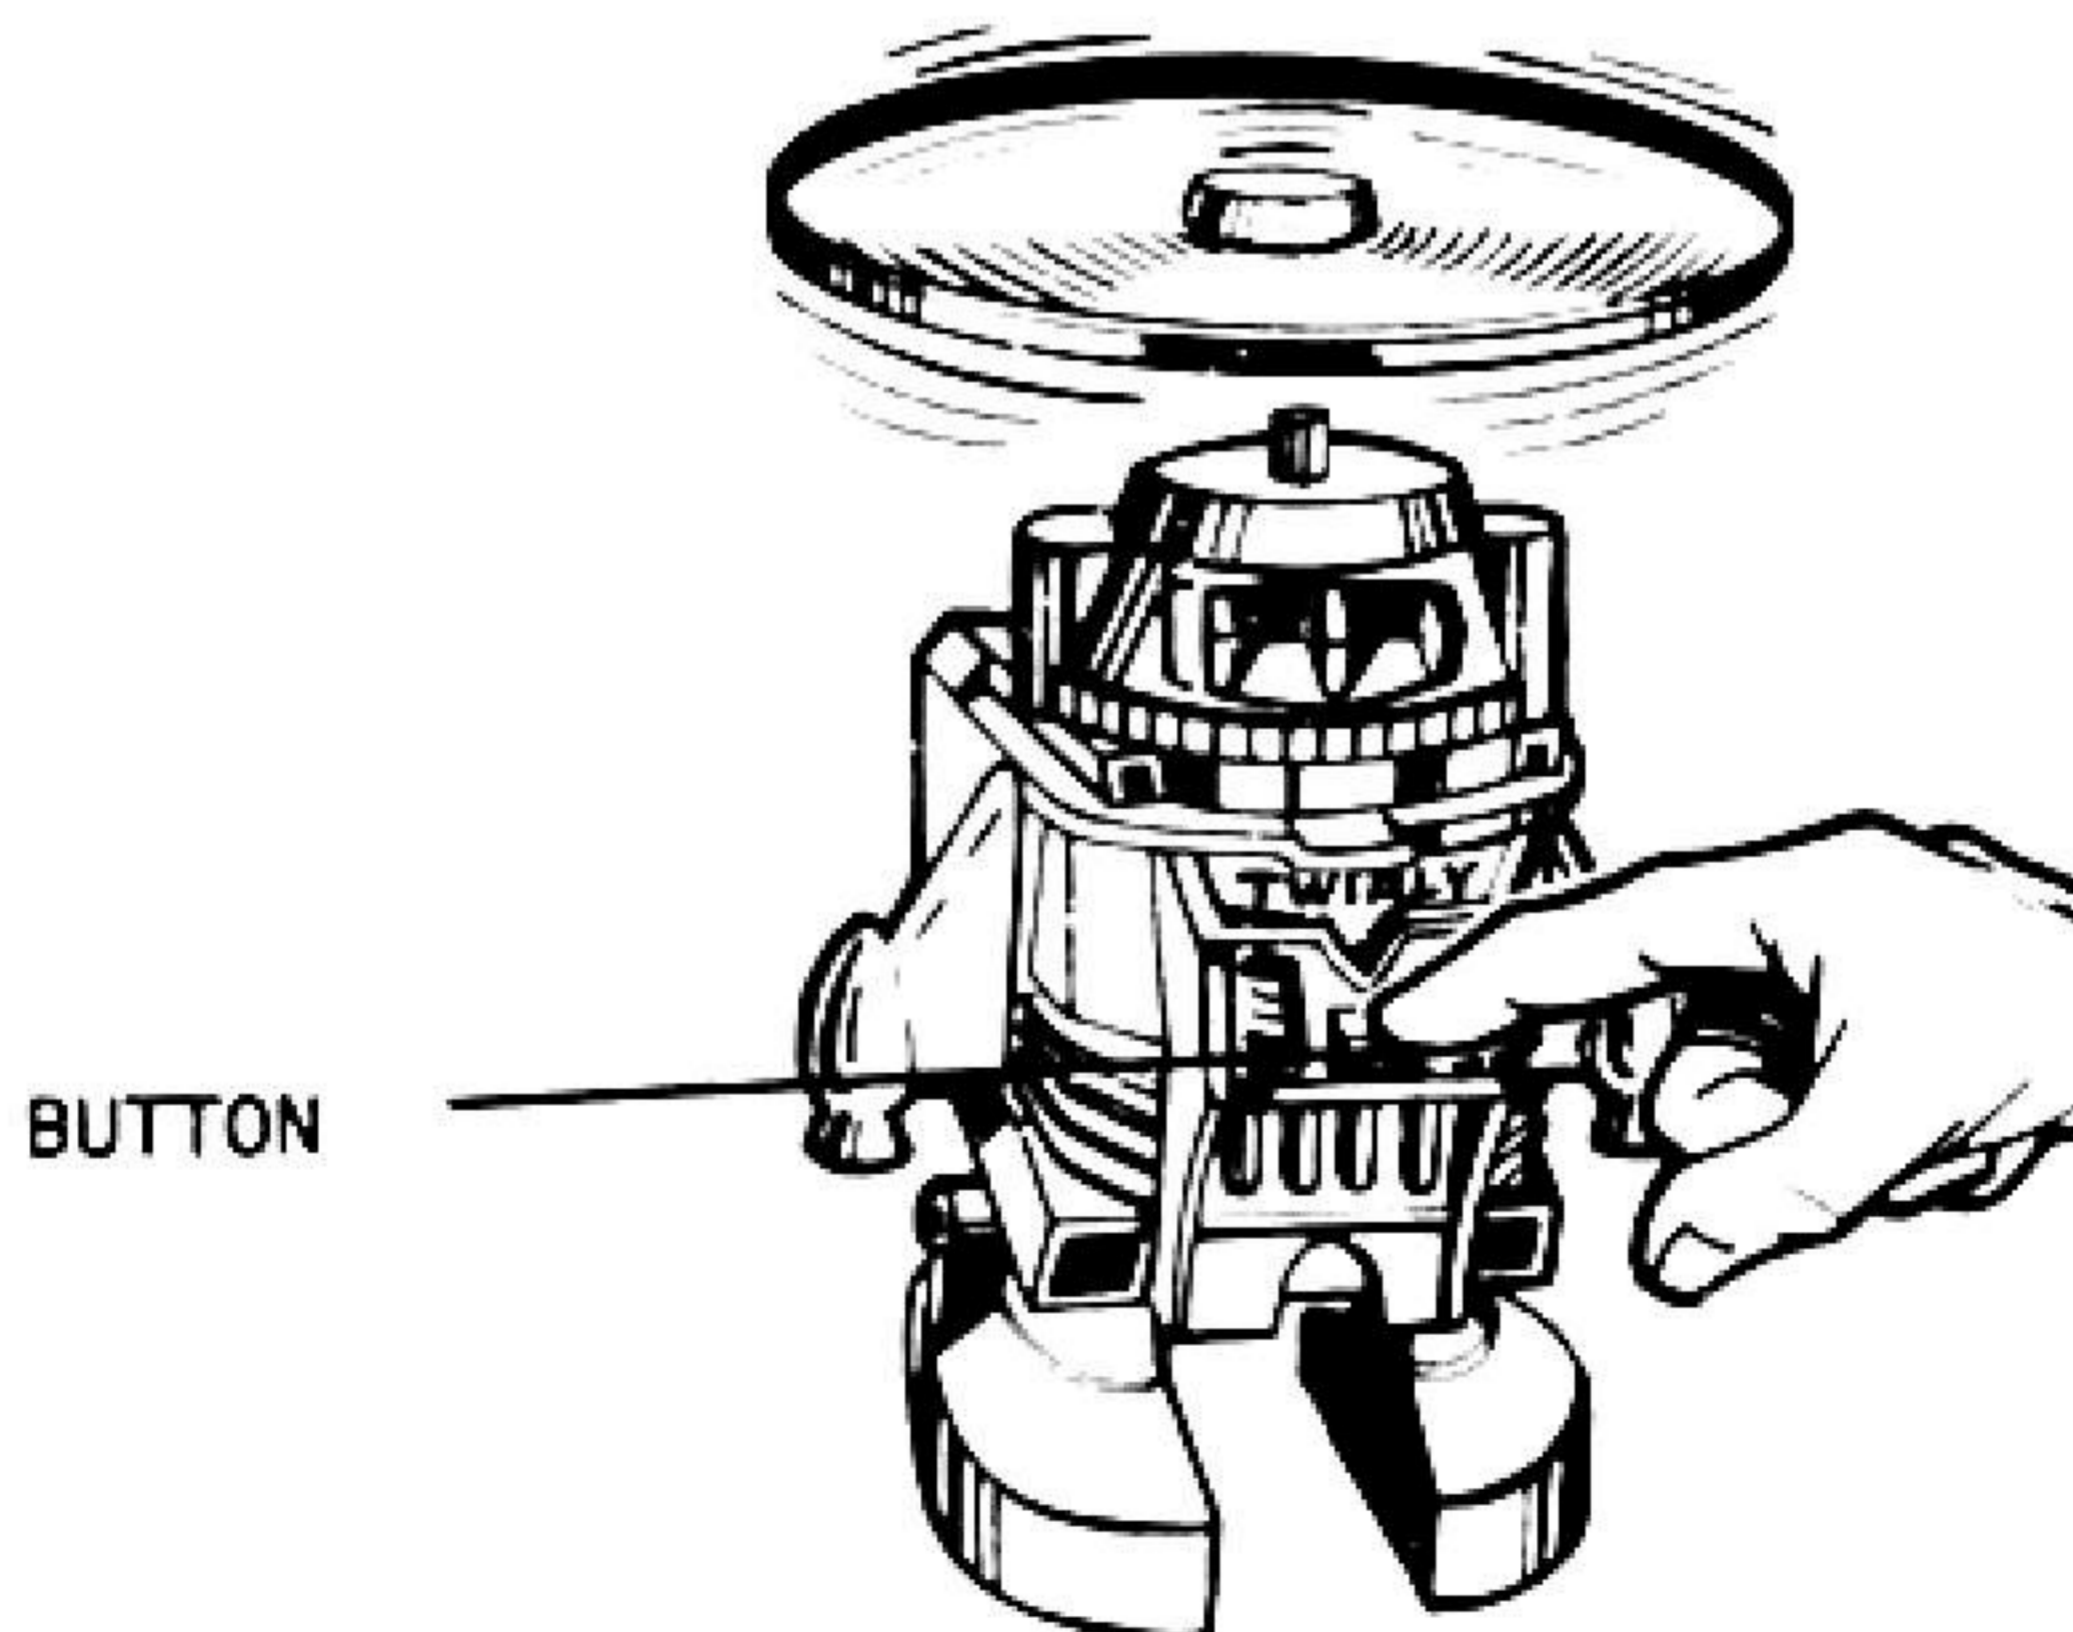

PRESS THE BUTTON IN FLYING SAUCER'S CHEST AND THE SAUCER WILL FLY OFF HIS HEAD.



©1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206

3026-0010


PRINTED IN HONG KONG



4


FLYING SAUCER

POWER PACK

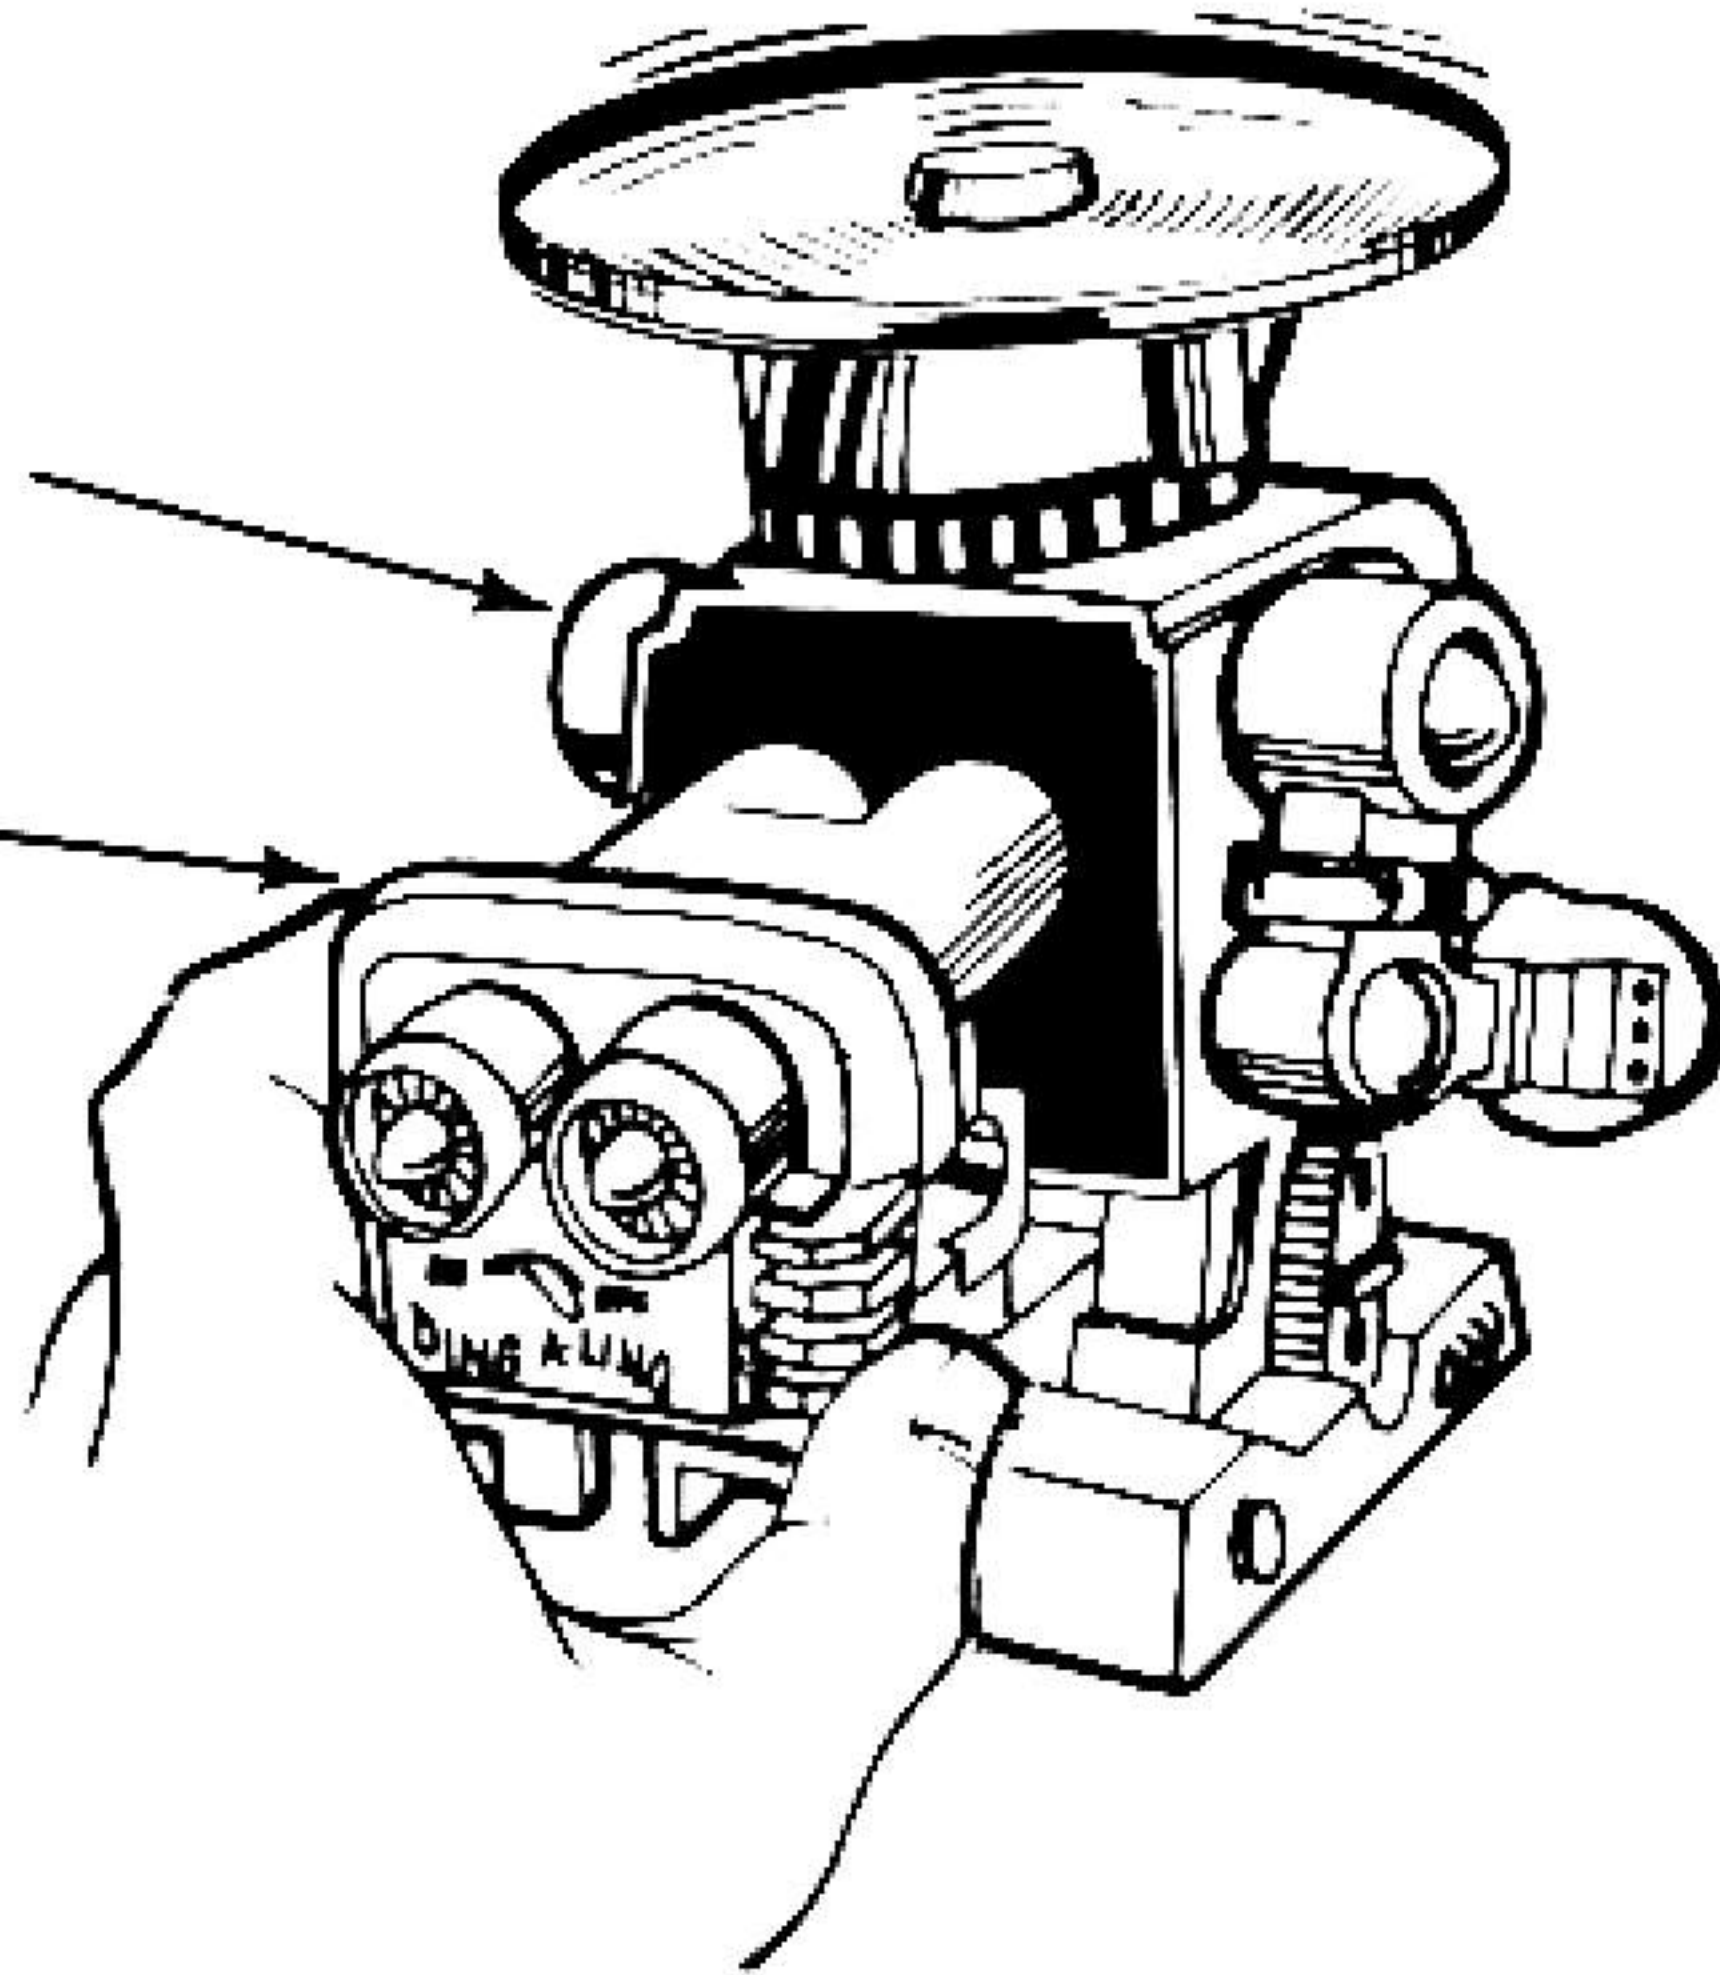

ADD POWER TO YOUR FLYING SAUCER WITH A DING-A-LING POWER PACK. ALL YOU NEED IS ONE POWER PACK TO MAKE ALL YOUR DING-A-LINGS WALK AND GLIDE. (POWER PACK AND SPACE SKYWAYS SOLD SEPARATELY.)

5

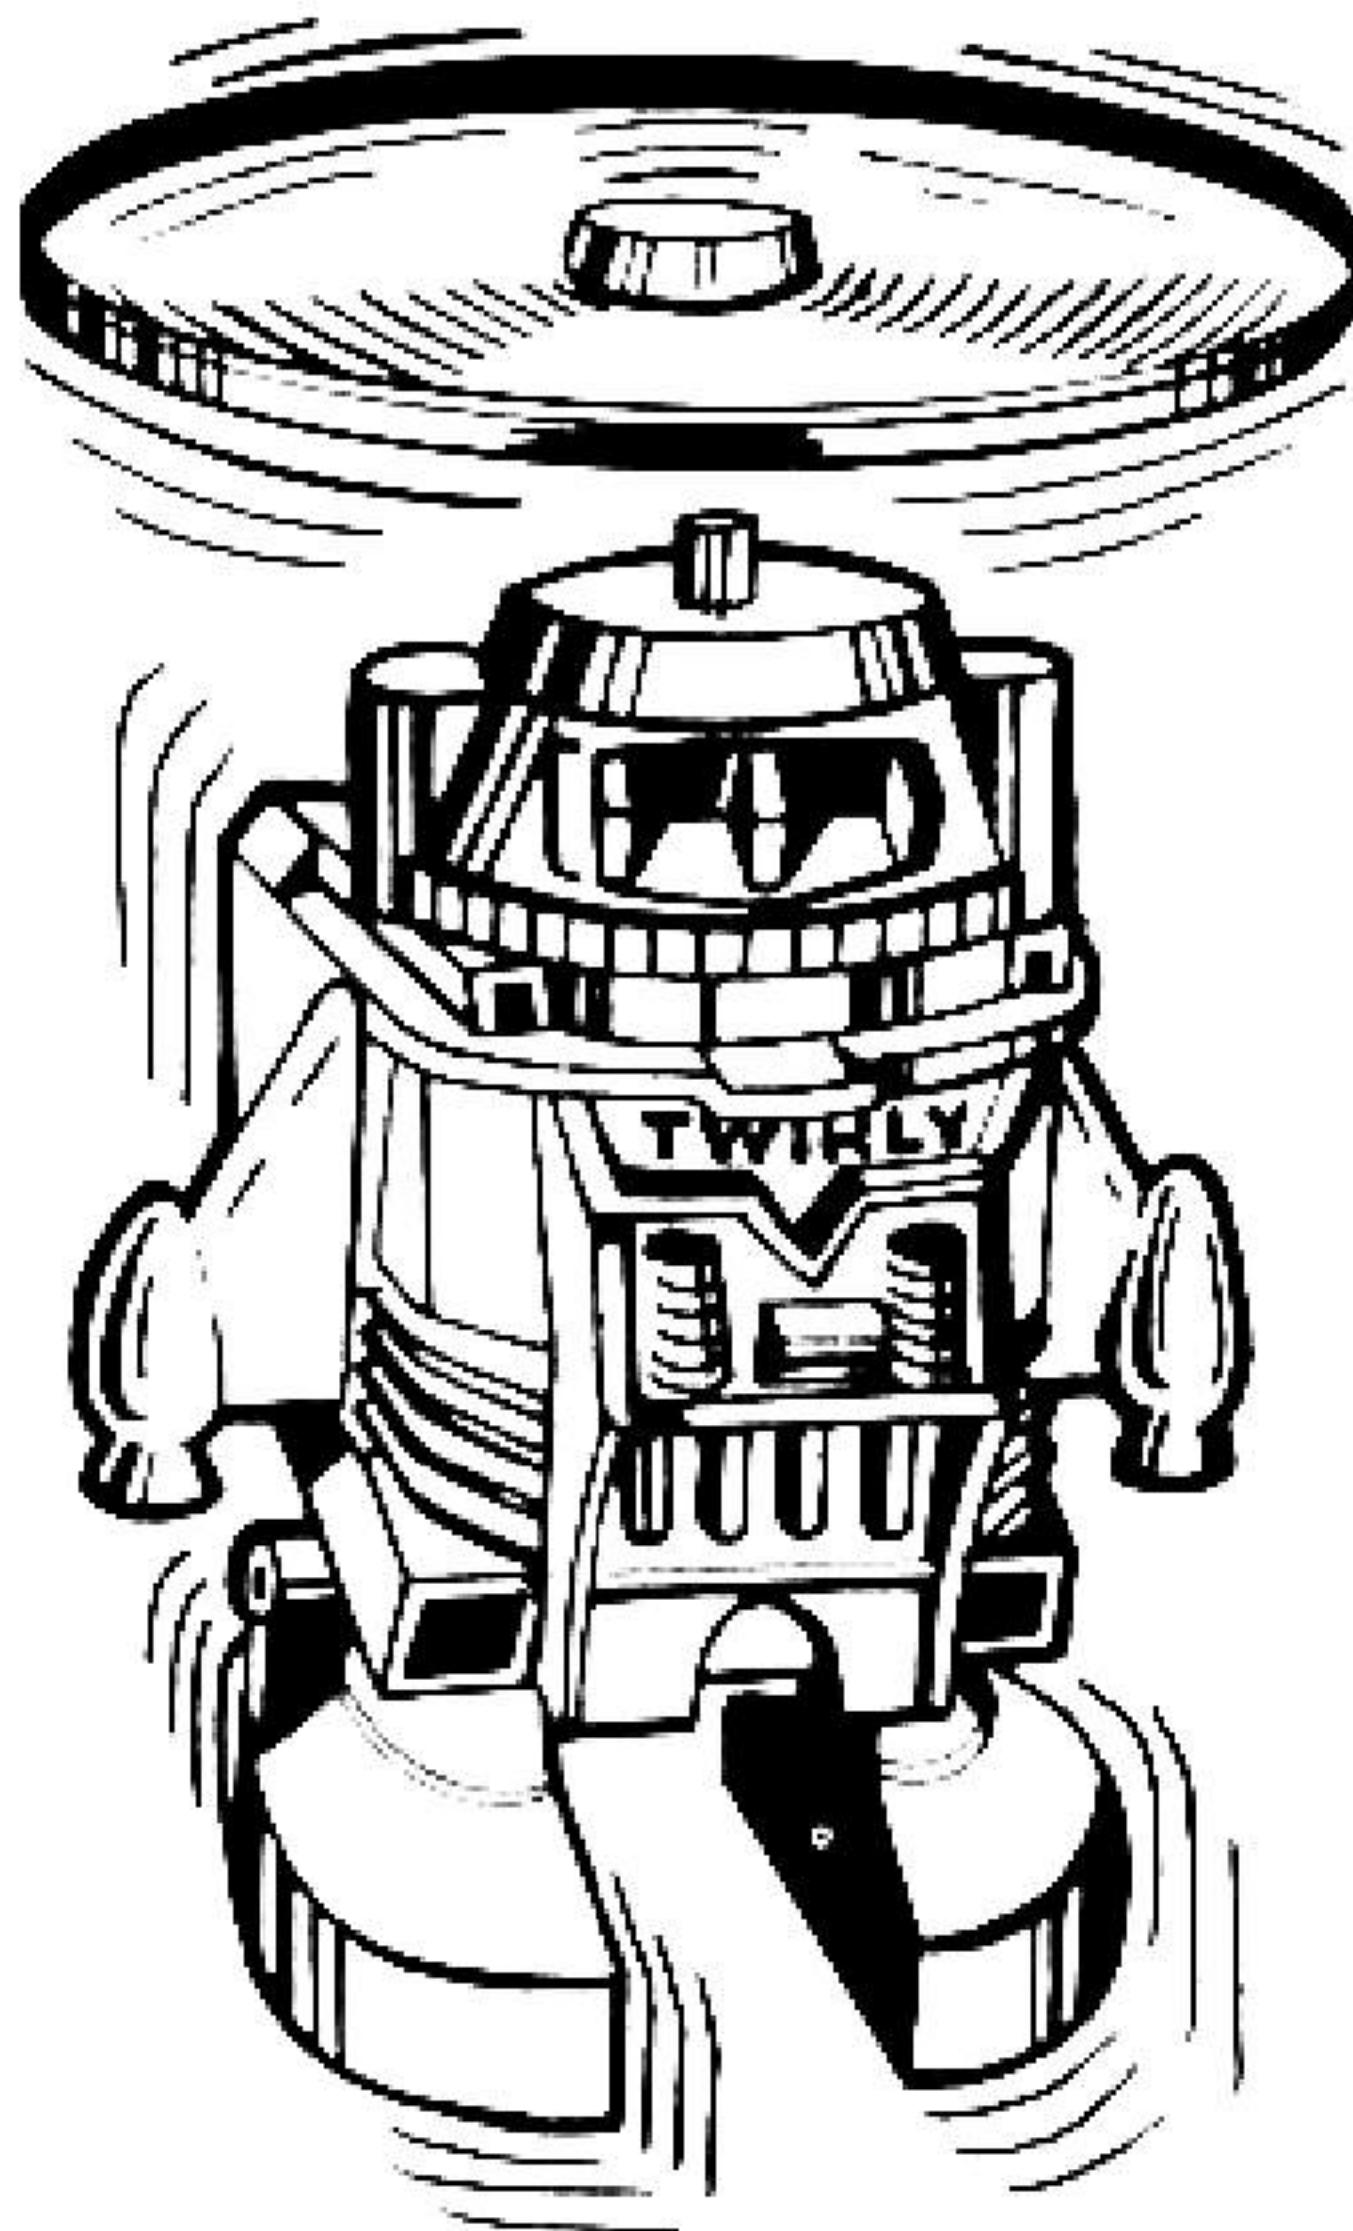

WHEN YOU HAVE ADDED POWER TO YOUR FLYING SAUCER, HE WILL WALK AND LAUNCH THE SAUCER ALL BY HIMSELF.