 


No. 770400

**Radio Control JIM THE POLITICIAN
(Serving Tray Included)**

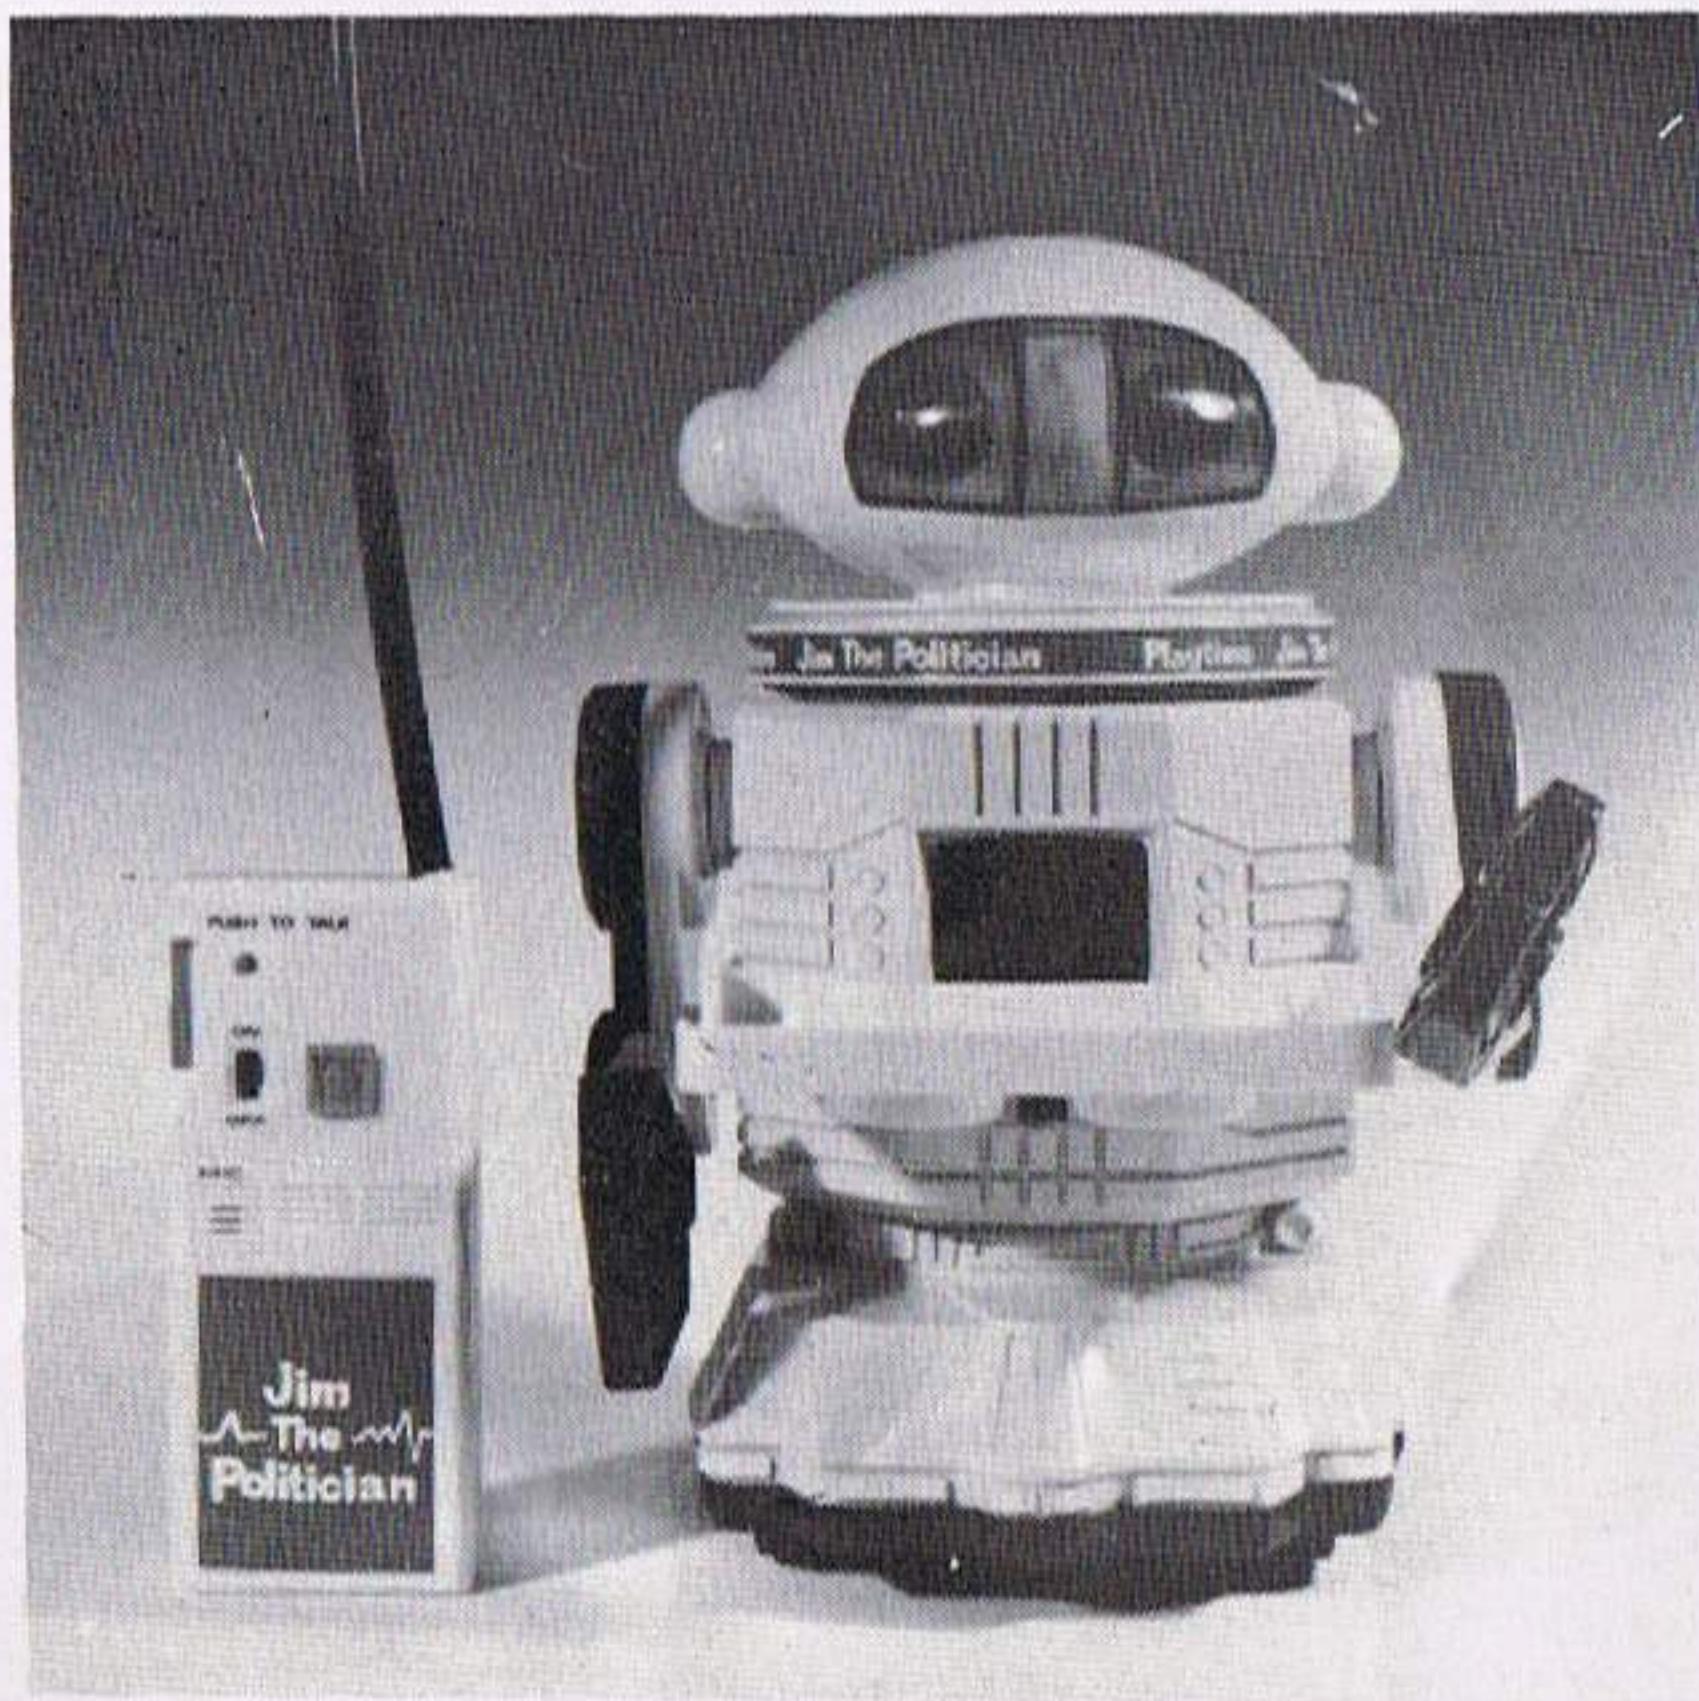


- Eyes Light
- Forward
- Turns in reverse in circular path
- Hands hold objects



OPERATION

Move the on/off switch on the body to 'on' and also move the switch on the transmitter upwards until the red light comes on. Depress the command key A and Robot will go forward. Depress the key again and Robot will reverse to the right. To transmit voice messages through Robot's built in voice simulator, depress the push to talk key and speak into the transmission microphone located on your hand held transmitter.

CARE AND MAINTENANCE

For the most effective operation of Robot use alkaline batteries and operate on a smooth flat surface. If Robot will be deactivated for a long period, remove the power packs and store in a warm dry place. Clean only with a soft dry cloth and avoid contact with water, since this will damage Robot's circuitry.

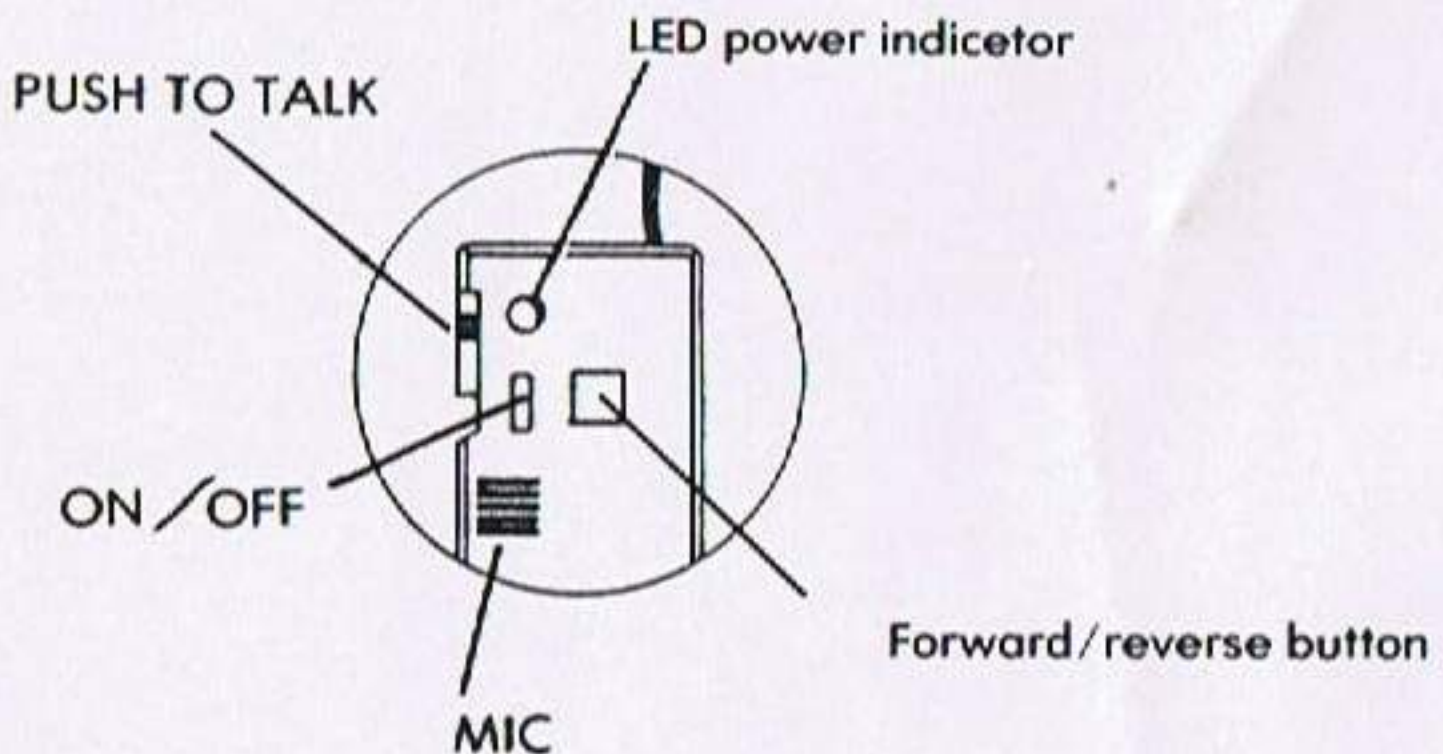

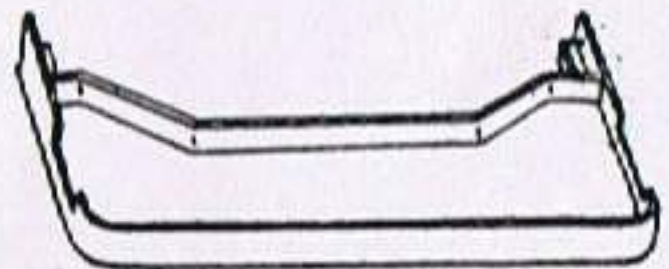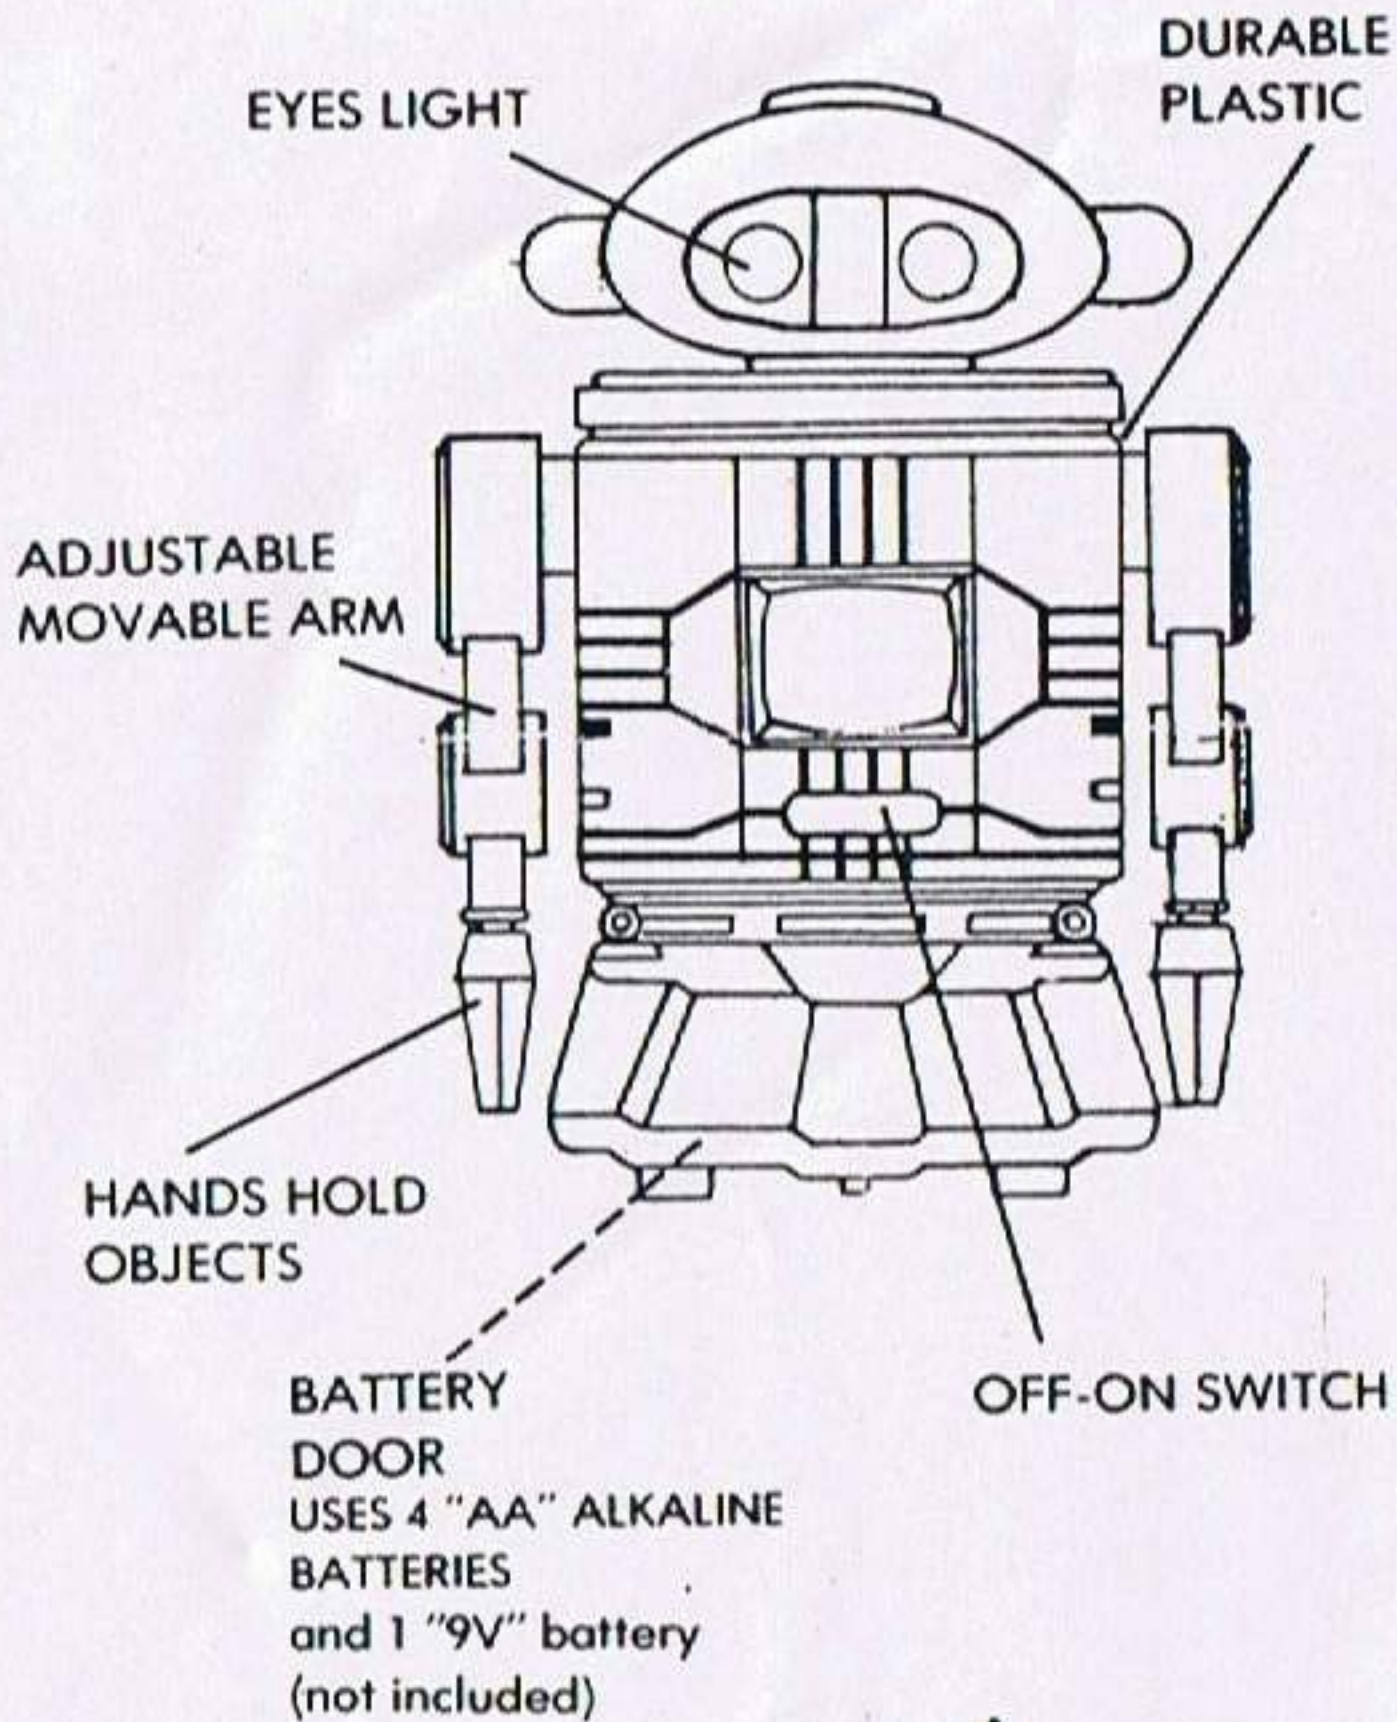


SERVING TRAY INCLUDING

BATTERIES INSTALLATION OF ROBOT

Robot requires one 9 volt and 4 AA size 1.5 batteries to operate. To install: open the base plate by sliding in the direction of the arrow and place batteries inside battery compartment as indicated. Replace battery compartment cover.

BATTERY INSTALLATION OF TRANSMITTER

The hand held transmitter requires one 9 volt battery to operate. To install: slide the power pack compartment cover in the direction of the arrow and remove it. Place the battery inside as indicated in the diagram. Replace power pack compartment cover.

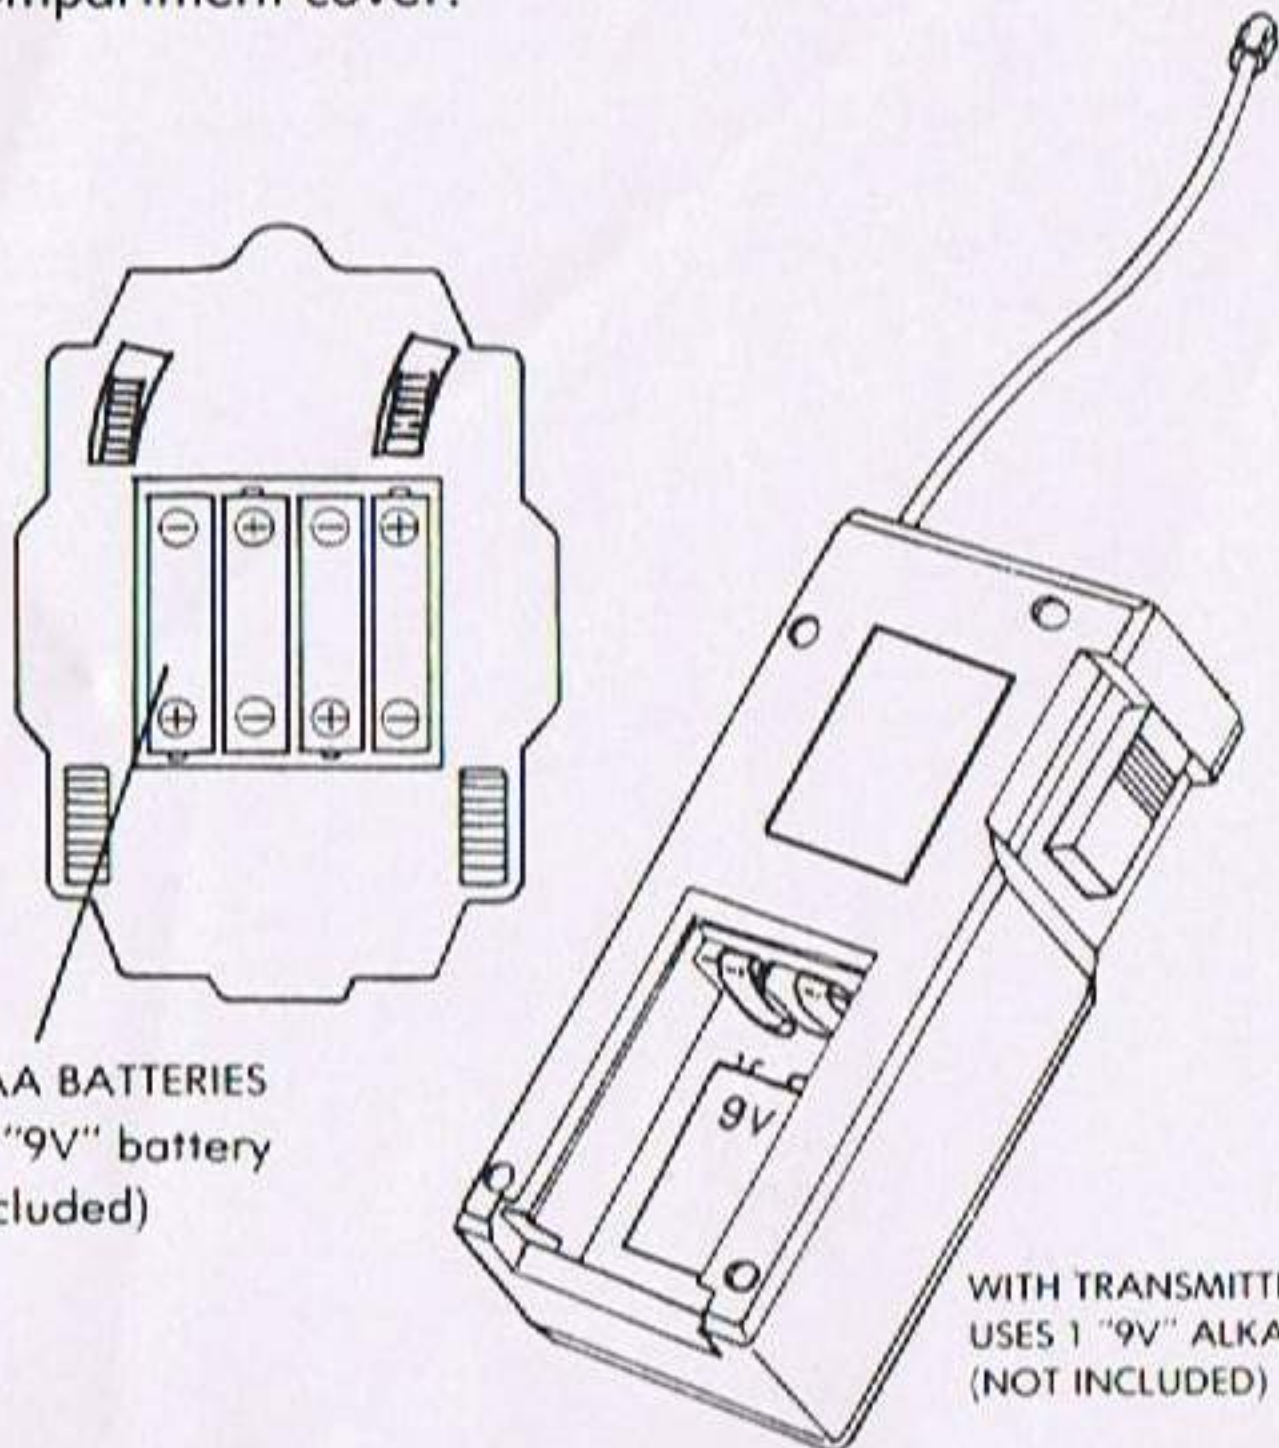

FOUR AA BATTERIES
and 1 "9V" battery
(not included)

WITH TRANSMITTER
USES 1 "9V" ALKALINE BATTERY
(NOT INCLUDED)