

ACCESSORIES VARIATION

INFRARED SENSOR

 
Notes

- Keep the transparent panels of the SENSOR clean. Any dust should be wiped up with clean cloth.
- Never face the sensor direct to light.
- Recharge the BATTERY after approximately two hours of use.
- Cassette deck is parallelly functionable.



★MAKE ROBOT WAITER!

★MAKE ROBOT SALESMAN!

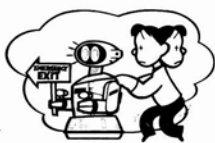

★MAKE ROBOT PILOT!

TRACER TAPE

(Line Tracer)

Notes

- Use vinyl tape of about 18mm wide.
- Keep the light-sensitive surface of the SENSOR clean and free of dust.
- The ROBOT will not move properly without distinct contrast between the color of the floor and the tape. Should this happen, find another place to set up the ROBOT's course.
- Cassette deck is parallelly functionable.



★USE ROBOT FOR SALES!

★USE ROBOT FOR TRANSPORTATION!



★USE ROBOT FOR GAME PARTNER!

PHOTO SENSOR

Notes

- Keep the transparent plate of the SENSOR clean. Any soap should be immediately wiped up with clean cloth.
- If the change of light volume is not sufficient, not functionable. Try to make the change of the light biggest to operate smoothly.



★SERVE AS GUARDMAN!

(For HEAROID)

By preparing programmed tape beforehand with REVERSE program at the end, same program is repeatable at the each change of the light volume from the original condition. Stand by position of the tape is automatically prepared to be played from the beginning.



★SERVE AS CONDUCTOR!

SECURITY DETECTOR

(Wire Sensor)

Notes

 
- For HEAROID, refer PHOTO SENSOR above.



★NEVER CATCH COLD!



★CREATE ORIGINAL GAME!

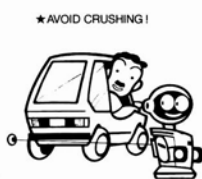

★AVOID CRUSHING!

 
ULTRASONIC SENSOR

Notes

- Replace the battery in the TRANSMITTER if not workable.
- Keep the SENSOR clean. Any soiling, dust or liquid, must be immediately wiping up with clean cloth.
- Cassette deck is parallelly functionable.



★LET'S OPEN MAGIC SHOW!

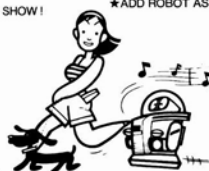

★ADD ROBOT AS FAMILY MEMBER!



★LET BABY RACE WITH ROBOT!