


# Spotbot™ INSTRUCTIONS

The Off-On Switch and Battery Compartment are located on the bottom. Slide the Battery Compartment door towards the tail end of Spotbot and lift open. Insert one "AA" battery as shown. We recommend Duracell® batteries or other quality alkaline batteries.

NOTE: Spotbot runs best on smooth, flat surfaces.

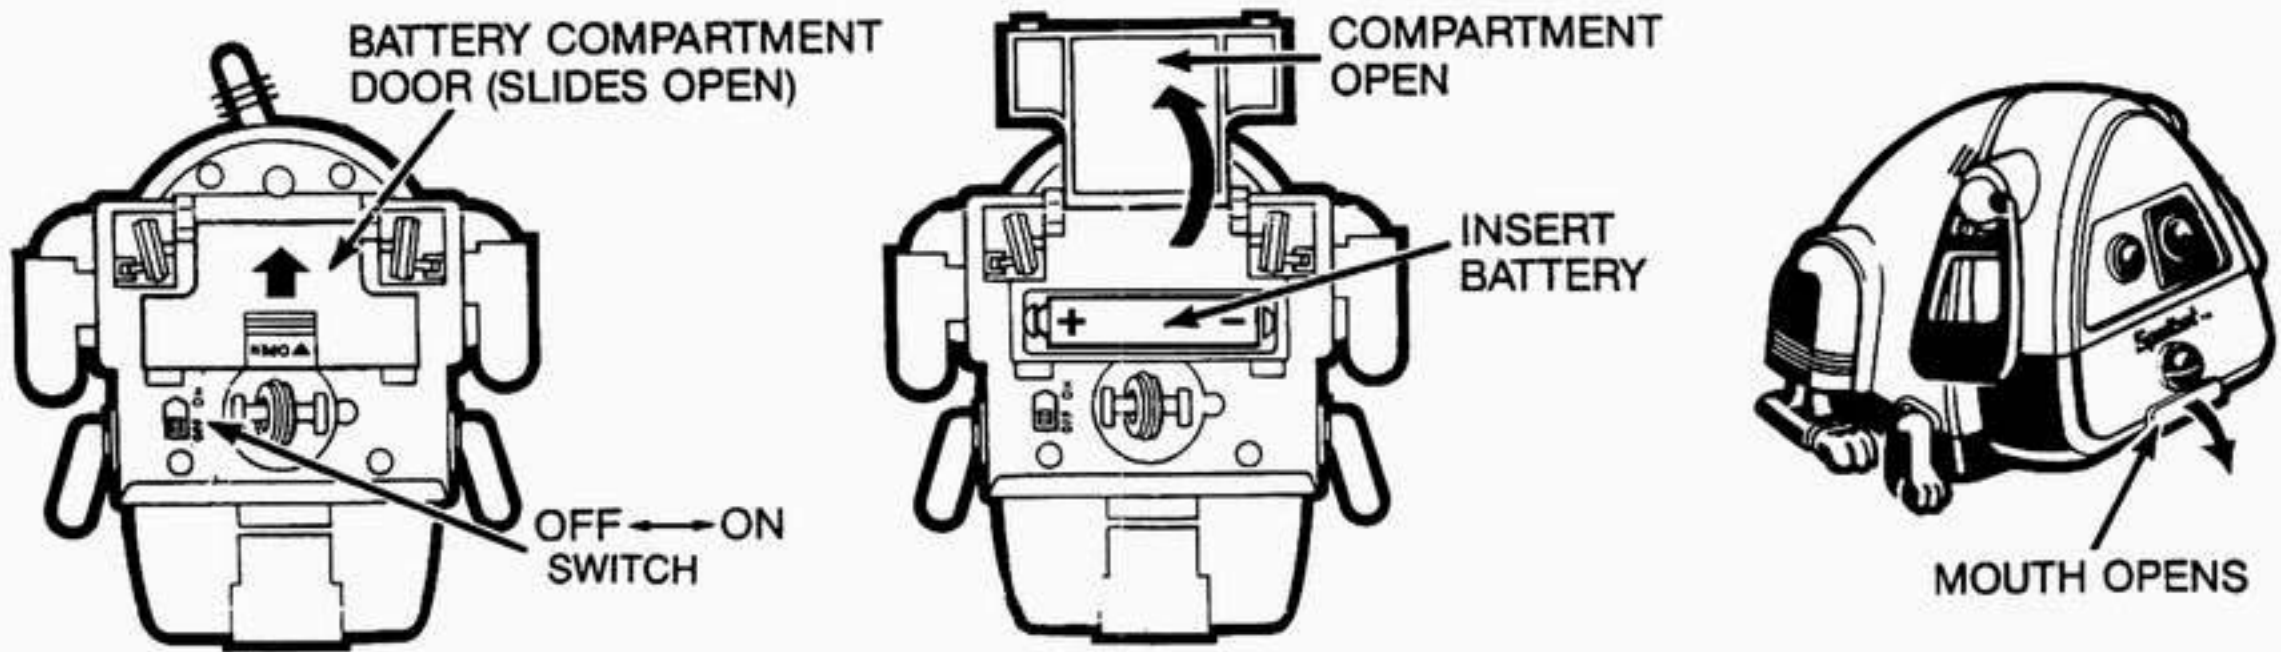

Spotbot can carry thin, paperlike objects in his mouth. Gently, push his mouth down in the direction indicated to insert object.

**TOMY.**

© 1989 Tomy America Inc., 427 Northfield Avenue Edison, New Jersey 08818. Printed in Singapore.

No. 5407