

THE GENIUS


Your robot friend that plays with you


Read instructions carefully

The robot consists of (fig. 1) and a remote control unit (fig. 2) **COLOURED FIXED LENSES** SOUND LENSES GAME SELECTOR BUTTON ("JOGOS") **ABILITY LEVEL BUTTON** (HABILIDADE) Jogos Position 1 = 8 sequencies Position 2 = 14 sequencies Position 3 = 20 sequencies Position 4 = 31 sequencies SWITCH (OFF - PLAY - WALK) HABILIDADE ARTICULATED ARMS LONGEST SEQUENCE BUTTON REPETE PARTIDA MAISLONGO (MAIS LONGO) Pushing this button as the end of the game PERCIVAL will repeat the longest sequence obtained during the game. REPEAT BUTTON (REPETE) Pushing this button the last sequence will be repeated. **HOOK FOR** CARRYING Push this button to start playing (Partida). SOUND SWITCH ON -SWITCH OFF Figura 2 Figura 1 **REMOTE CONTROL BUTTON**

BATTERIES

The robot uses 4 batteries of 1.5 V and 1 battery of 9 V.
The remote control unit uses 1 battery of 9 V.
Insert batteries as shown in illustrations.

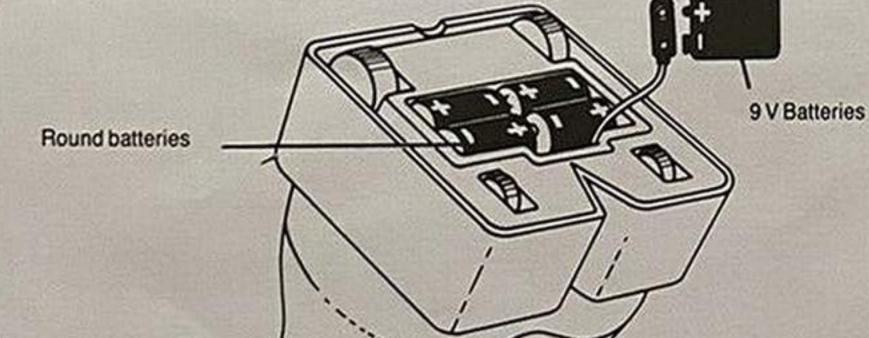

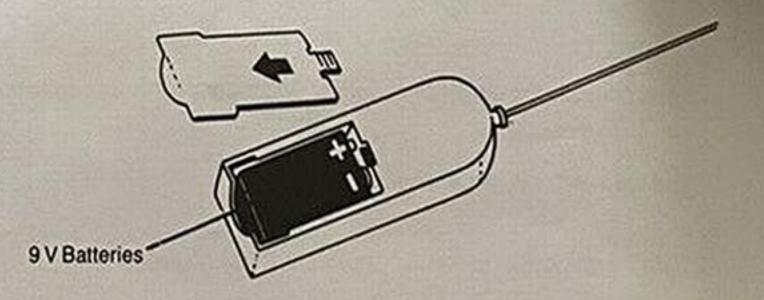

IMPORTANT:

Be sure the switch is in the off position when inserting the batteries.


CHECKING THE BATTERIES

When the movements of the PERCIVAL become slow, the batteries have to be changed.

SPEED IS SLOWING DOWN

- Check whether the wheels are obstructed.
 Check whether the contacts are well pressed. against the batteries.

 3. Check whether the batteries are charged.

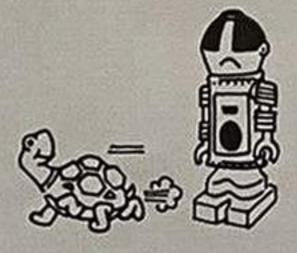

DOES NOT RESPOND TO THE REMOTE CONTROL

- 1. Check whether the contacts are well pressed against the battery 2. Empty battery



FAILING OF REMOTE CONTROL UNIT

- 1. Check whether the contacts are well pressed against the battery 2. Empty battery.



BASE OF PERCIVAL TREMBLES

Check whether wheels are obstructed.

