

AGES 4+
59961 Asst.

FURBY BABY

Your **emoto•tronic** Friend™

CARE GUIDE

Thank you for purchasing FURBY BABY™!

For maximum play value, please read
and follow instructions carefully.

Requires 3 x 1.5V "AA" or LR6 size
alkaline batteries (not included). Phillips/
cross head screwdriver (not included)
needed to replace batteries.

 


To Insert Batteries

Use a Phillips screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door and insert 3 x 1.5V "AA" or LR6 size alkaline batteries. Replace door and tighten screw.



CAUTION: TO AVOID BATTERY LEAKAGE

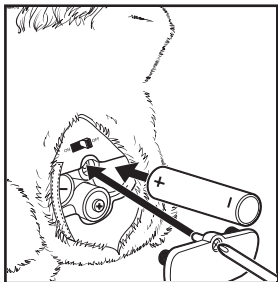

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.



Hey! I'm FURBY BABY™!

 
Be sure to take good care of me by following the instructions in this booklet!

Getting Started

To activate, slide ON/OFF switch to "ON" (I may move my legs). I'll then open my eyes and make noises or say, "Feed me!"




FURBY BABY has 2 sensors:

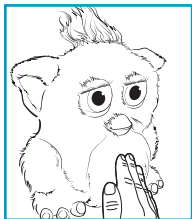

Tummy Sensor:

 Activate by touching lightly with the pads of your fingers

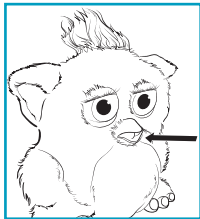

Mouth Sensor:

Activate by inserting the bottle (or your finger)

 
WAKING AND FEEDING BABY

When I say, "Feed me", insert the bottle into my mouth. You may even hear me "chewing" on the bottle. After feeding and stretching, I may make uncomfortable sounds or say, "Me no feel good", meaning I need to be burped. Touch my tummy once and I'll "relieve" myself.

If my mouth is open, I probably need to be fed more.

If I'm asleep, wake me up by feeding me.

If you don't feed me when I ask you to, or burp me when needed, I'll go back to sleep.

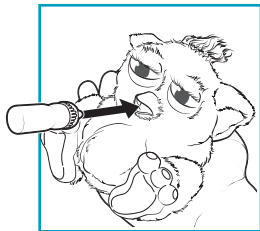

PLAYING WITH BABY

When I'm stretched out, fed and comfortable, I'm ready to play with you.

Touch my tummy and I'll say random phrases – including some in FURBISH®! I might even sing.

Don't forget to feed and/or burp me when I need it.

If I say, "Me sleepy", hold my tummy for 2 seconds and I'll go to sleep.

 
If I say, "Tickle me", touch my tummy and I'll laugh.

If you leave me alone, I'll say a few more phrases, then go to sleep.



FURBY BABY™ AND FURBY®

I can talk with a big FURBY! Press FURBY's tummy for a few seconds until he blinks. Then touch my tummy for a few seconds until I blink. Then quickly hold FURBY and me close together so our tummies touch. FURBY will say "Hey wah" and then we'll start talking to each other.

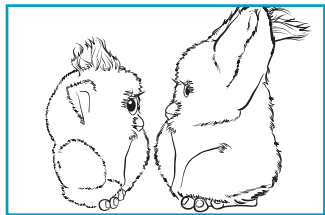

When I say:	FURBY will say one of these phrases:
Mama doo?	Hey, kah ay-ay bay-bee (Hey, me see baby) [then giggles] Kah may-may oo-nye bay-bee (Me love you, baby) Kah wee-tee bay-bee (Me sing baby) [then sings]
Dada doo?	Hey, kah ay-ay bay-bee (Hey, me see baby) [then giggles] Kah may-may oo-nye bay-bee (Me love you, baby) Kah wee-tee bay-bee (Me sing baby) [then sings]
Bay-bee mee-mee ay-tay	Hey! Doo-moh ah-tah bay-bee (Hey, please feed baby)
Bay-bee boo noo-loo	Ay-ay bay-bee kah doo-loo (Look baby, me funny) [then dances]
Bay-bee mee-mee way-loh or Me sleepy	Kah wee-tee bay-bee (Me sing baby) [then sings]

If FURBY doesn't "hear" one of my 6 phrases within 30 seconds, repeat the process again.

IMPORTANT NOTE

If FURBY BABY does not respond properly:

1. Make sure that your hand that is holding FURBY BABY is not too close to the tummy sensor, or
2. Slide the ON/OFF switch to OFF, then back to ON, or
3. Replace the batteries.

CLEANING INSTRUCTIONS

To clean FURBY BABY, gently brush fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in the washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry the fur; once fur is completely dry, replace batteries.
- Avoid spilling food or beverages on the toy.
- Do not throw or kick the toy, and do not push sharp objects through the speaker openings.
- Do not leave toy in direct sunlight; high temperatures will destroy the mechanism.



FURBY BABY™ DICTIONARY

I speak FURBISH®, a “magical” language common to all FURBY creatures. Keep this handy dictionary nearby so that you can understand what we’re saying when we speak FURBISH!

FURBISH®

ENGLISH

Ay-ay bay-bee kah doo-loo	Look baby, me funny
Bay-bee boo noo-loo	Baby not happy
Bay-bee mee-mee ay-tay	Baby very hungry
Bay-bee mee-mee way-loh.....	Baby very sleepy
Dada doo?.....	Where’s Daddy?
Hey, doo-moh ah-tah bay-bee	Hey, please feed baby
Hey, kah ay-ay bay-bee	Hey, me see baby
Kah may-may oo-nye bay-bee	Me love you, baby
Kah wee-tee bay-bee	Me sing baby
Mama doo?.....	Where’s Mommy?

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



**Not suitable for children under 3 years
because of small parts - choking hazard.**

Product and colors may vary.

© 2005 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
U.S. Patent Nos. 6149490, 6514117 &
6537128; AU722816; DE29904916.7 and
Patent Pending.

59961 Asst.

PN 6553450000



Questions? Call 1-800-844-3733

TIGER
ELECTRONICS
Where Technology Comes to Play!™

