

Fisher-Price®

Baby Smartronics™



Learn-a-Bot™

Instructions
Model Number: 71682

 
Please save these instructions for future reference.

Requires three "AA" batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).

Battery Replacement

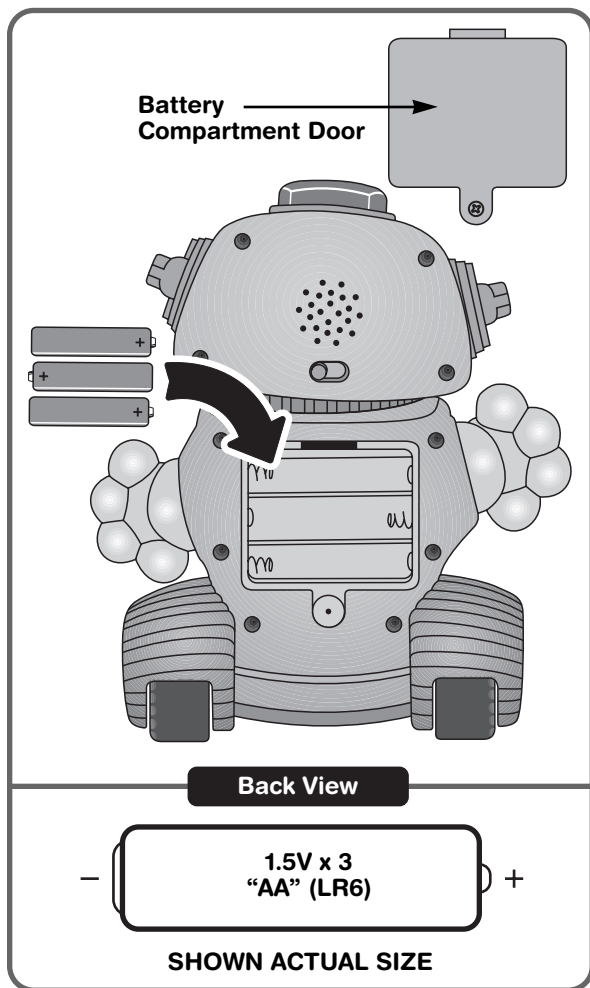

For best performance, we recommend that you replace the batteries that came with this toy with three, new alkaline batteries.

- Locate the battery compartment on the back of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Lift to remove the battery compartment door.

- Remove the exhausted batteries and properly discard them.
- Insert three "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

 
Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop working, it's time for an adult to replace the batteries!

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Learn-a-Bot™

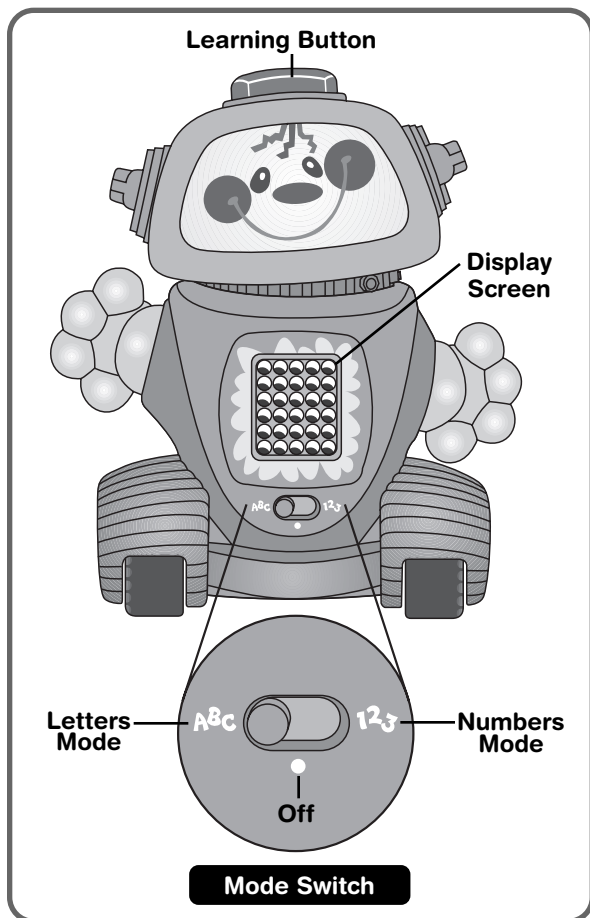

- Learn-a-Bot™ has two learning modes: Slide the mode switch to either: letters mode **A B C**; or numbers mode **1 2 3**.
- To turn power off, slide the mode switch to off •.

Letters Mode

 
- **To learn letters**, slide the mode switch to **A B C**. Learn-a-Bot greets your child and invites your child to play and learn.
- Give the Learn-a-Bot a push and it sings the alphabet song, while showing various letters on its display screen.
- Press the learning button on top of Learn-a-Bot's head to hear the name of the letter displayed, and a word that begins with that letter.
- Press the learning button again to hear and see another letter.

Numbers Mode

- **To learn numbers**, slide the mode switch to **1 2 3**. Learn-a-Bot greets your child and invites your child to play and learn.
- Give the Learn-a-Bot a push and it sings a counting song, while showing various numbers on its display screen.
- Press the learning button on top of Learn-a-Bot's head to hear the number displayed, and then see the number counted out on the display screen.
- Press the learning button again to hear and see the another number.

***Hint:** If your child is not actively playing with this toy, Learn-a-Bot will encourage your child to play. If your child does not respond, the toy automatically turns off (sleep mode).*

Adjusting the Volume

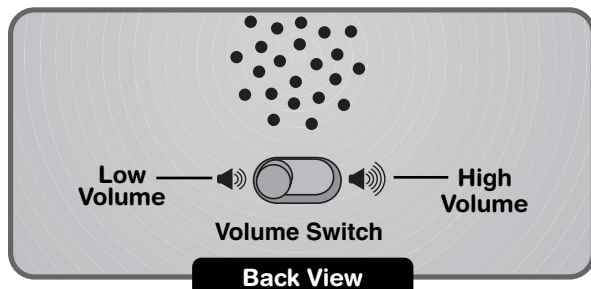

- Locate the volume switch on the back of the toy.
- Select low volume ◀ or high volume ▶.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM – 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

www.fisher-price.com

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 500303.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Fisher-Price Fisher-Price, Inc., a subsidiary of Mattel, Inc.
East Aurora, New York 14052, U.S.A.

©2001 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China
71682pr-0920