


DING A LING™

CLAW

INSTRUCTION SHEET

DO NOT THROW THIS SHEET AWAY. READ ALL INSTRUCTIONS CAREFULLY.

HOW TO PLAY WITH YOUR CLAW

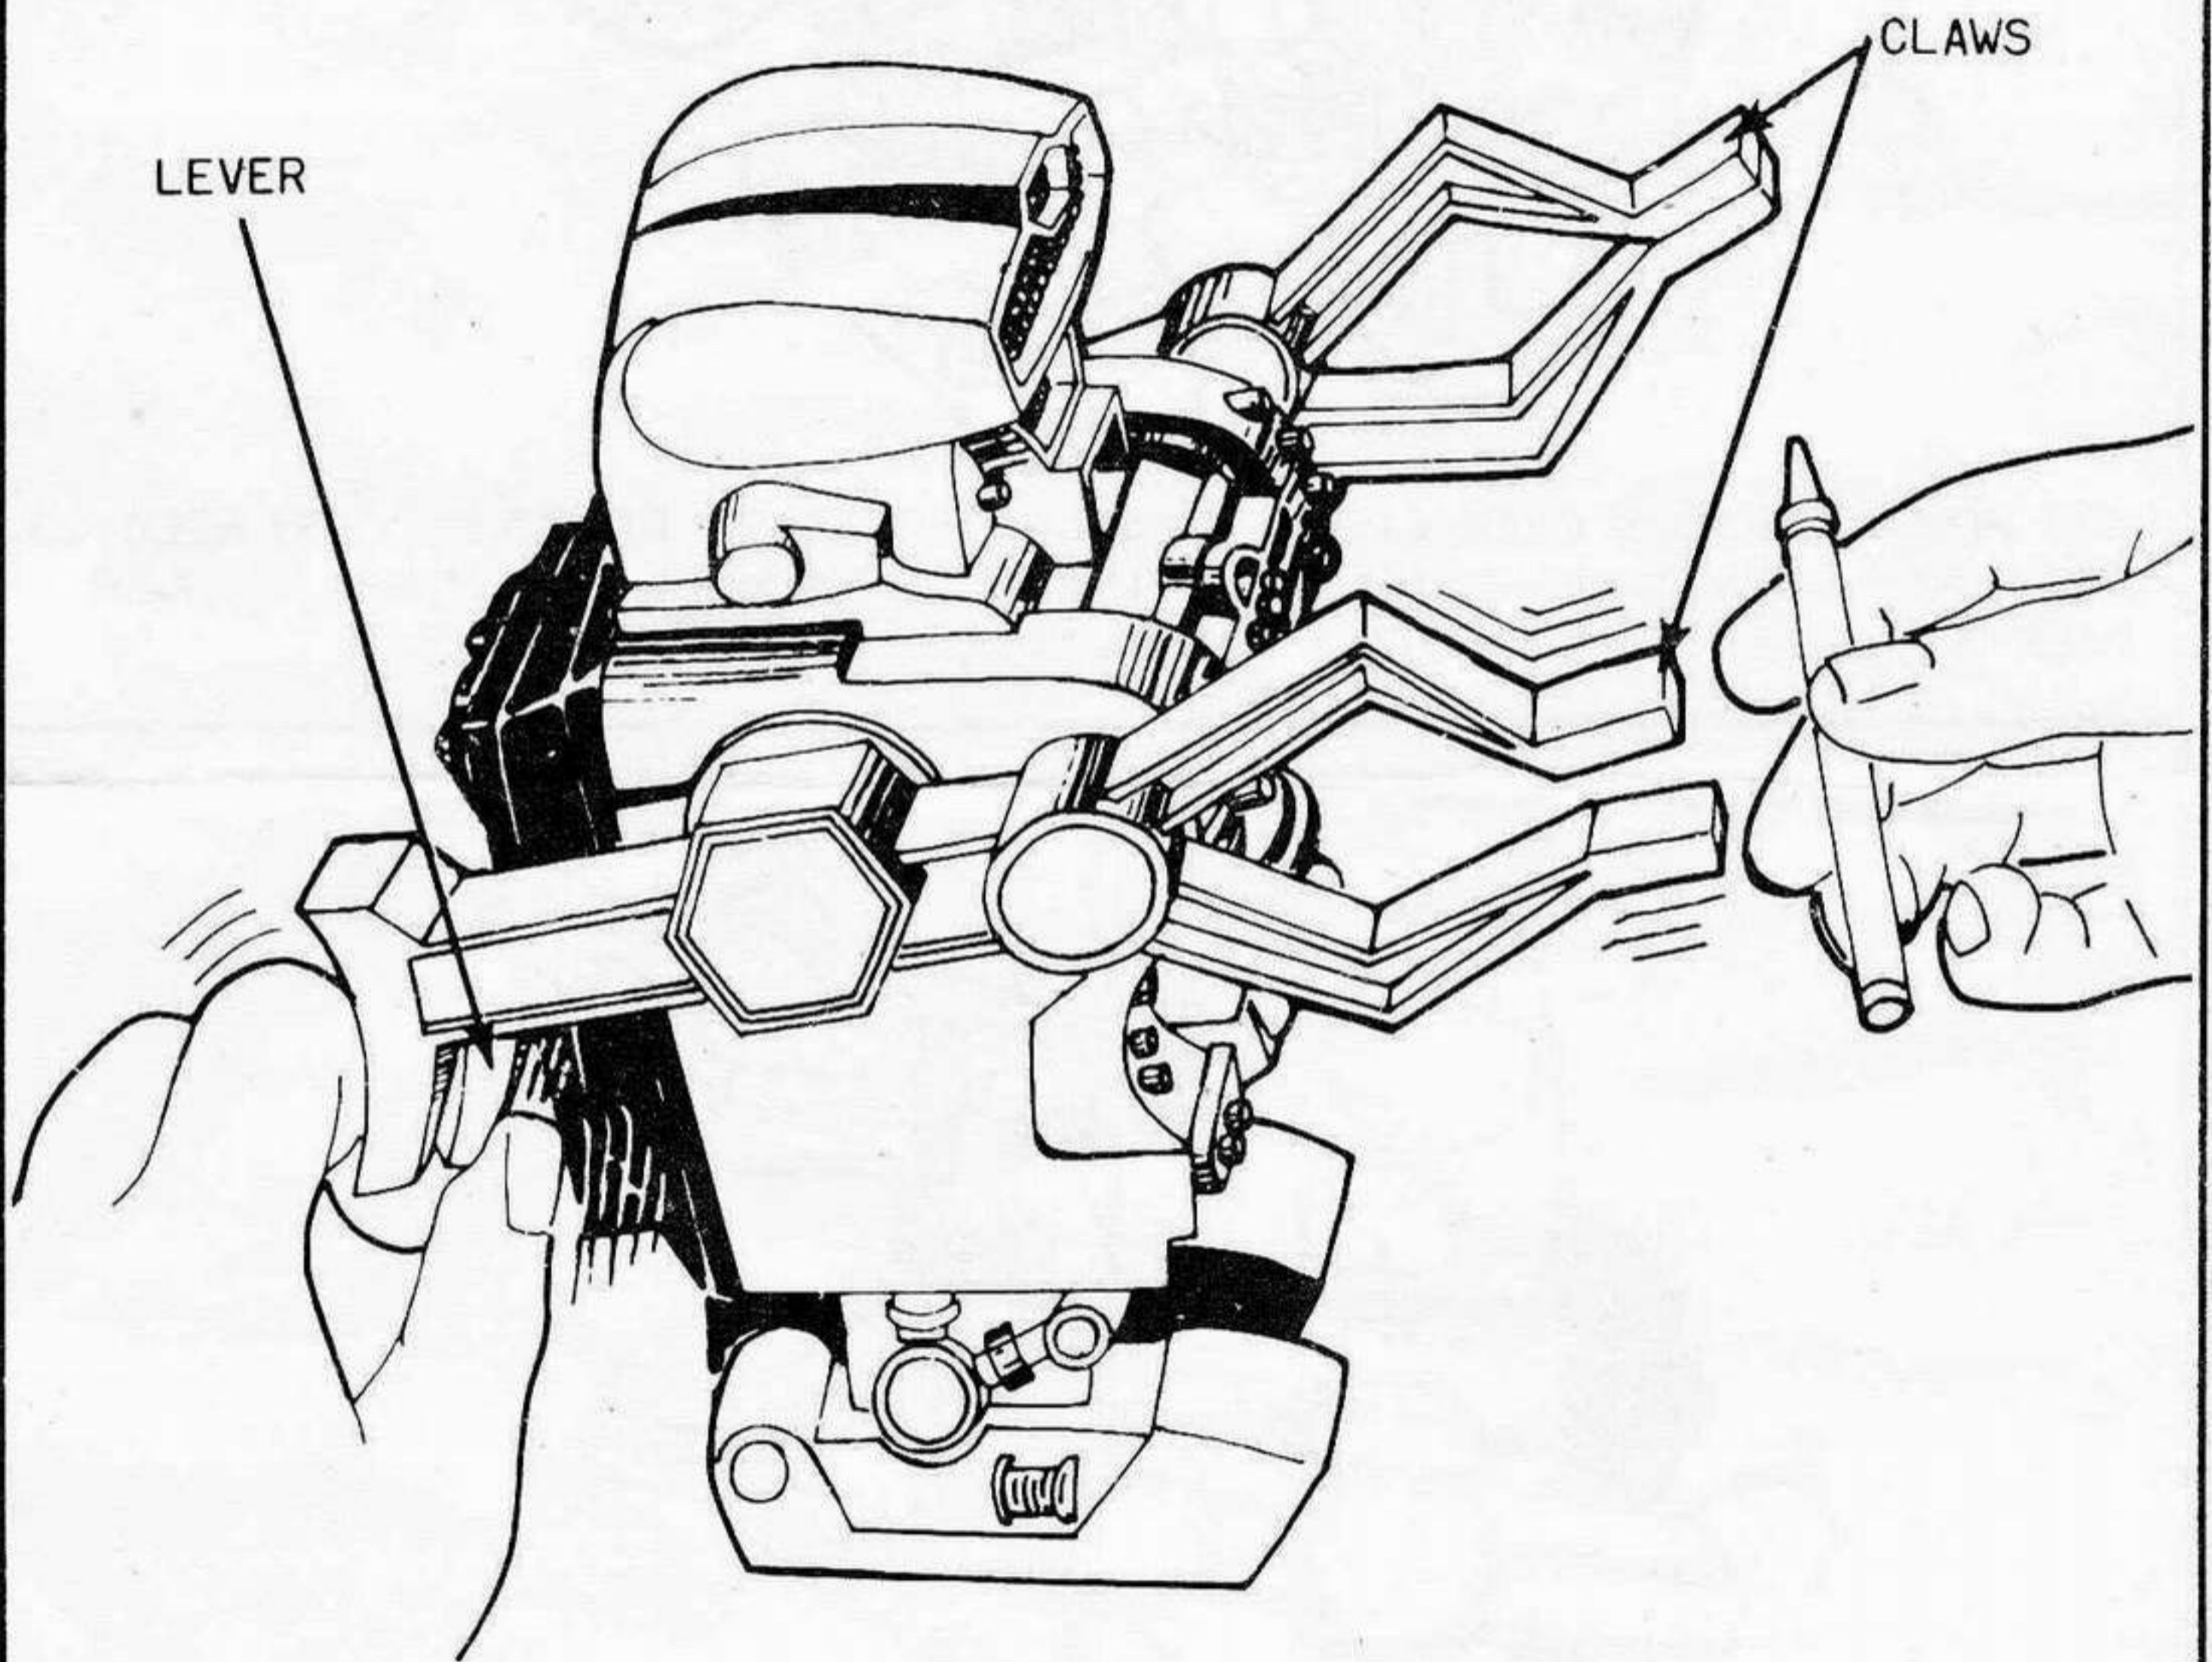

1. TO OPEN CLAW, PRESS LEVER BACK, AS SHOWN.
2. PUT A LIGHT OBJECT IN TIP OF CLAW AND RELEASE LEVER.
3. BOTH CLAWS MAY BE USED TO HOLD A LIGHT OBJECT.



© 1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206

3034-0010

PRINTED IN HONG KONG


DING-A-LING™

CLAW


INSTRUCTION SHEET

DO NOT THROW THIS SHEET AWAY. READ ALL INSTRUCTIONS CAREFULLY.

HOW TO PLAY WITH YOUR CLAW

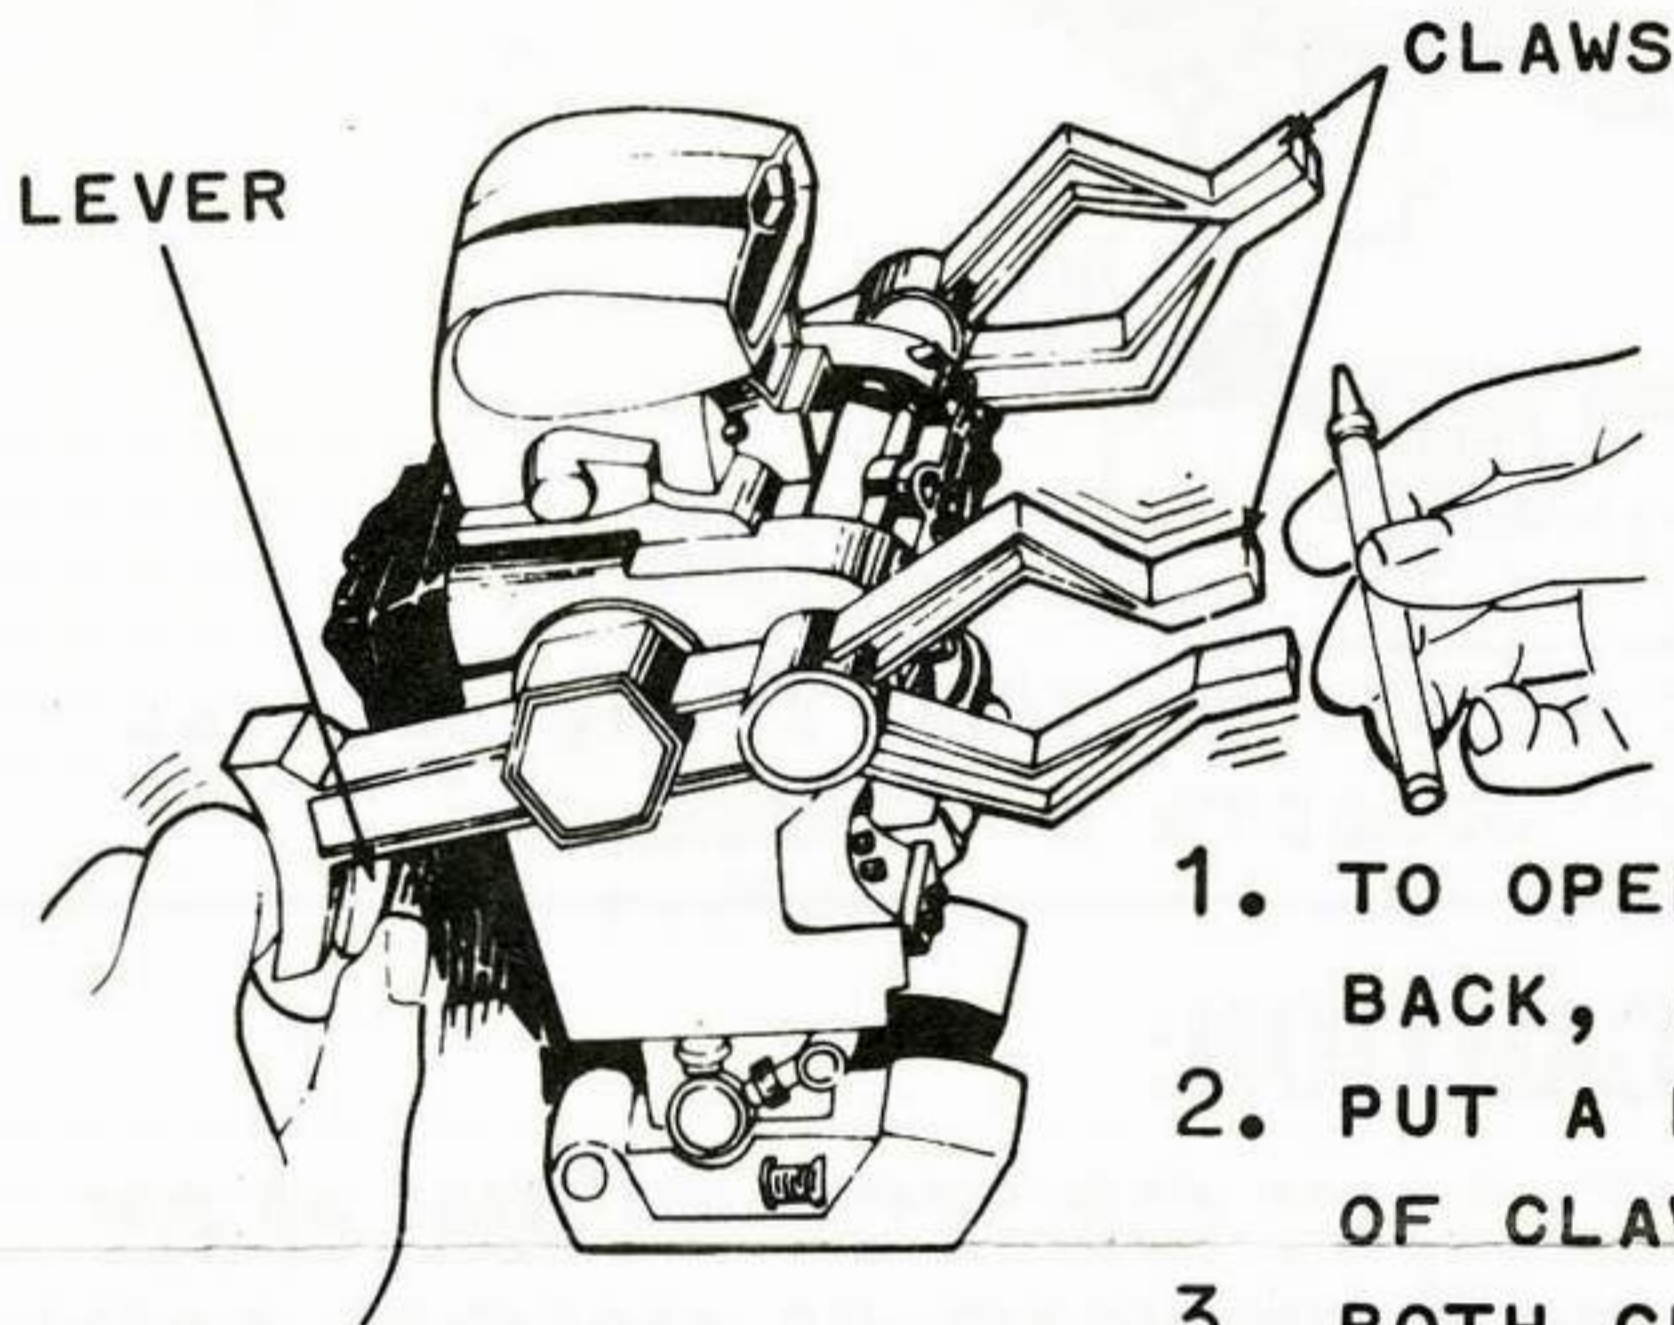

1. TO OPEN CLAW, PRESS LEVER BACK, AS SHOWN.
2. PUT A LIGHT OBJECT IN TIP OF CLAW AND RELEASE LEVER.
3. BOTH CLAWS MAY BE USED TO HOLD A LIGHT OBJECT.

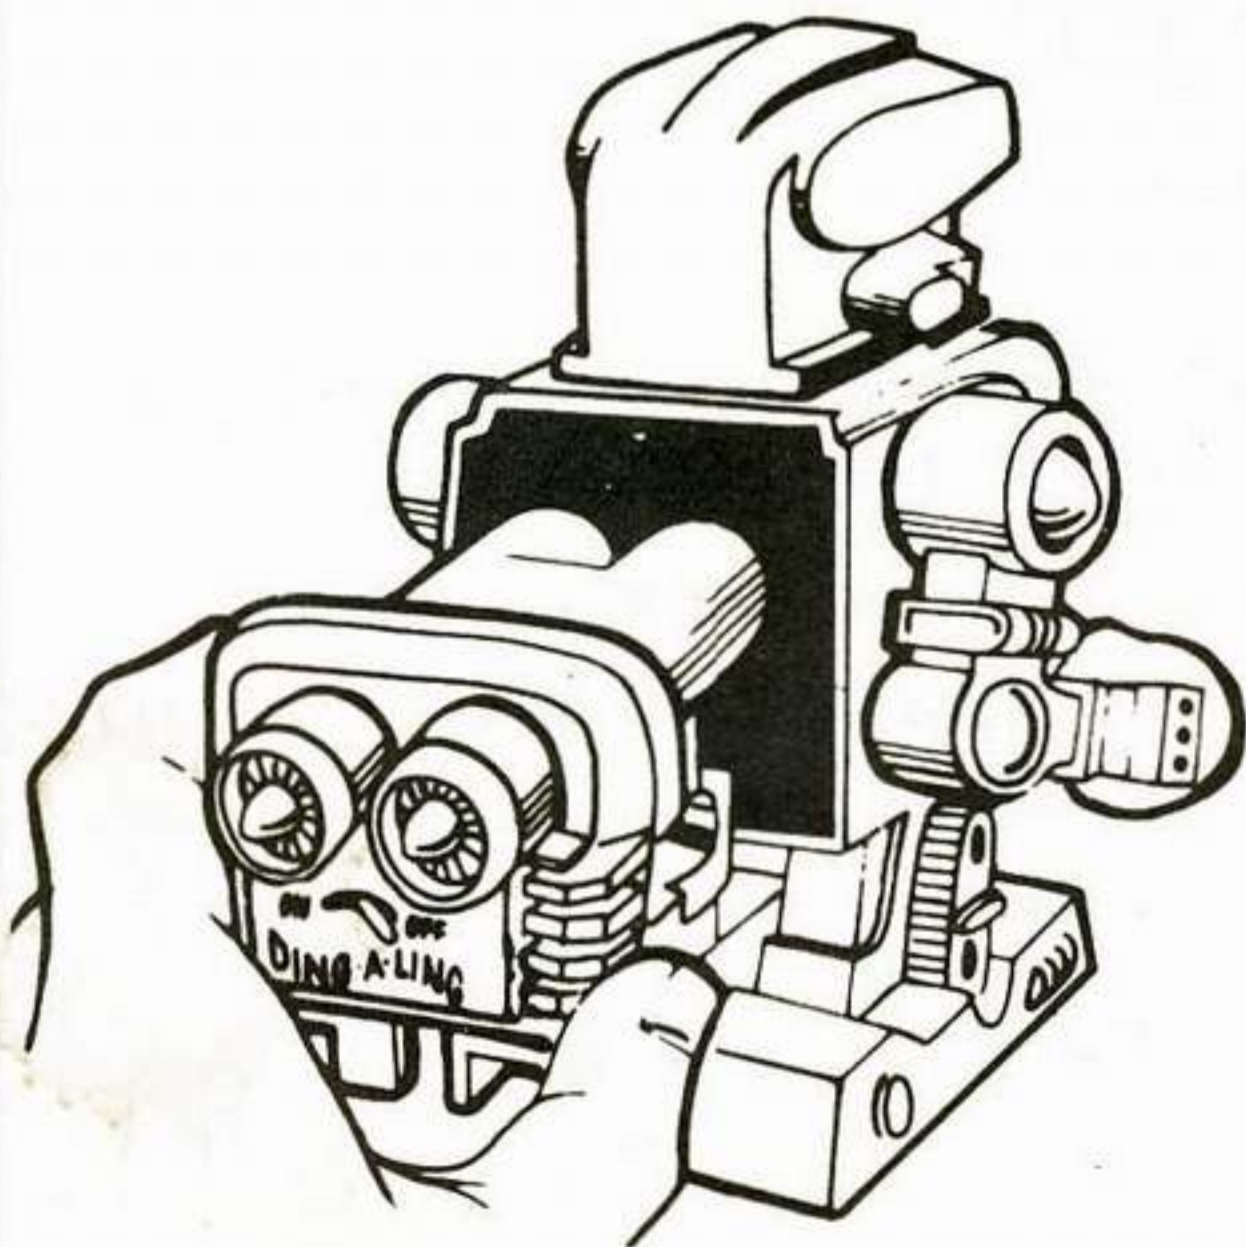


ADD POWER TO YOUR CLAW WITH A DING-A-LING POWER PACK. ALL YOU NEED IS ONE POWER PACK TO MAKE ALL YOUR DING-A-LINGS WALK AND GLIDE. (POWER PACK AND SPACE SKYWAYS SOLD SEPARATELY.)



© 1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206 3034-0010A

PRINTED IN HONG KONG

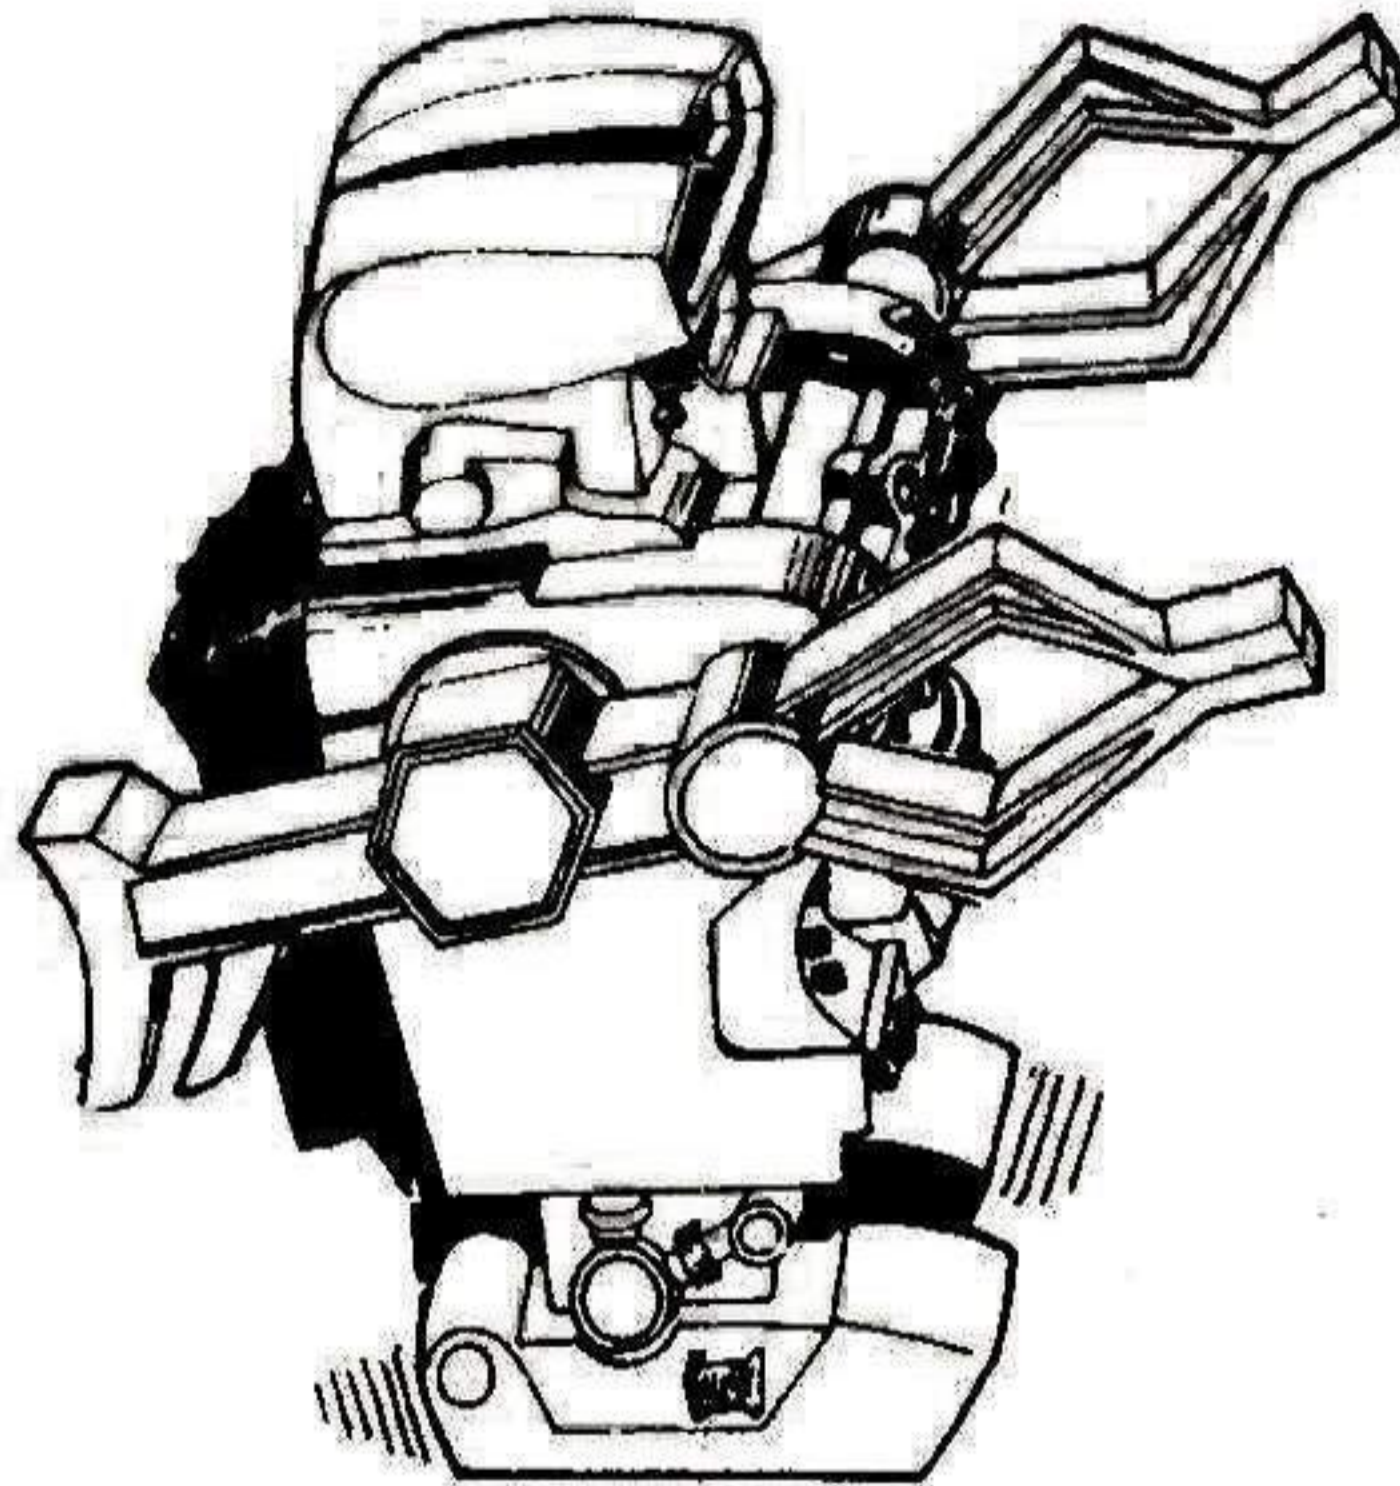


WHEN YOU HAVE ADDED POWER TO YOUR CLAW, HE WILL WALK AND CARRY LIGHT OBJECTS BY HIMSELF.

CAUTION:

YOU MUST REMOVE ANY OBJECT CLAW MAY BE HOLDING BEFORE PUTTING CLAW ON ANY DING-A-LING SPACE SKYWAY SET (sold separately).

IMPORTANT

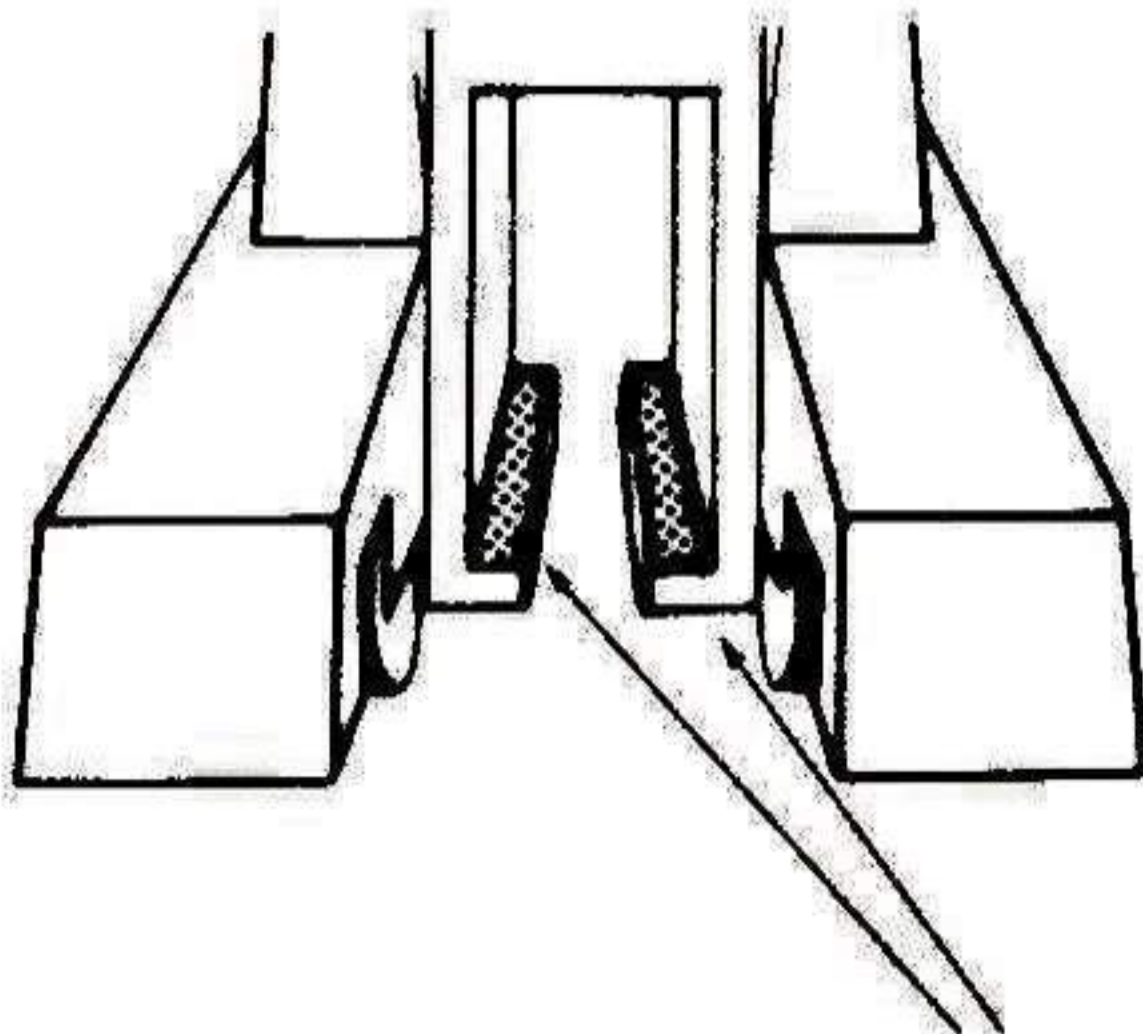

VASELINE®

FOR BEST RESULTS ON SPACE SKYWAY SETS (SOLD SEPARATELY), PUT A SMALL AMOUNT OF VASELINE® ALL ALONG LEDGES BETWEEN DING-A-LING'S FEET, AS SHOWN. BE SURE TO ADD MORE VASELINE® WHEN NEEDED.