



ROBOTIC BANKER

Radio Shaek®

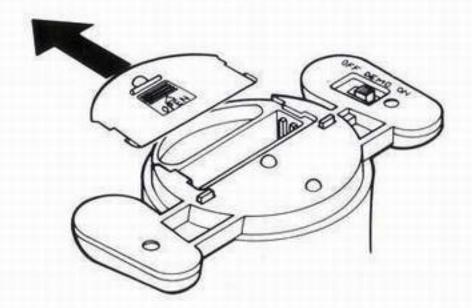

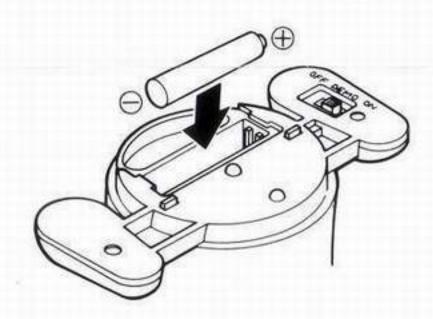

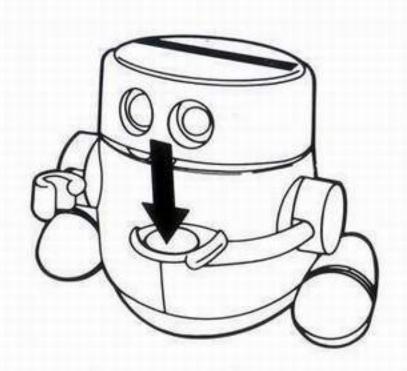

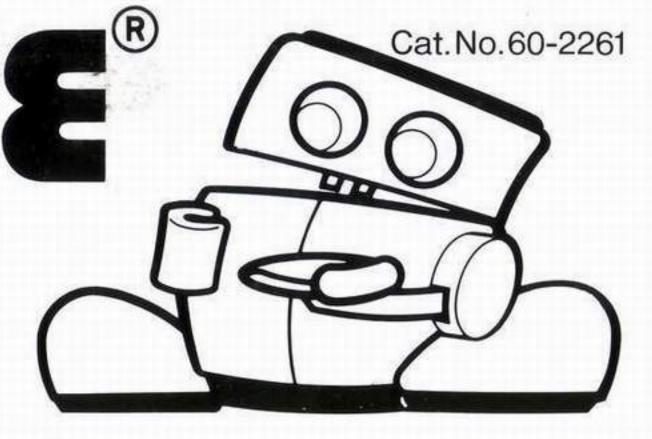

Meet Robie the Robotic Banker. His favorite food is a coin. And he is so hungry he eats all the coins you feed him.

But before you can feed him, you have to install a battery, so that Robie has enough energy to eat.

- Open the battery compartment by sliding the cover in the direction of the arrow.
- Insert an AA extra-life battery (Cat. No. 23-582) observing correct polarity (+ and –).
- Replace the cover.


OPERATION


Place a coin on Robie's left hand. Press down on the coin lightly with your finger, and then move your finger out of the way. Robie eagerly eats the coin.

Note: Dollar coins are too big to fit in Robie's mouth.

© 1988 Tandy Corporation. All Rights Reserved.

Robie and Radio Shack are registered trademarks of Tandy Corporation.

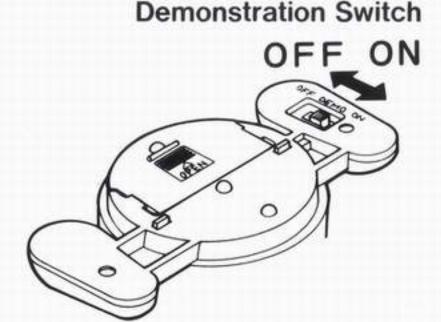

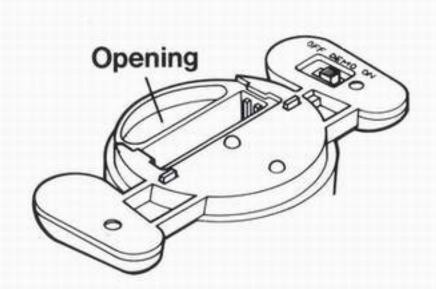

DEMONSTRATION SWITCH

If you turn the demonstration switch on, Robie moves constantly. If you turn the demonstration switch off while the banker is eating, Robie finishes eating the last coin before he stops. But you should usually keep the demonstration switch in the off position. This makes the battery last longer, because when the Robotic Banker is not moving, the battery is not used.

REMOVING THE MONEY

Open the battery compartment cover, tilt Robie a little bit, and the money falls out of the banker.

RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102